

UPPER BODY UNIT

OWNER'S MANUAL



SERIAL NUMBER HERE

DATE OF PURCHASE



INSTRUCTIONS

CONGRATULATIONS ON THE PURCHASE OF YOUR NEW FUSION 4 UPPER BODY STATION. THIS GYM WILL PROVIDE YOU WITH A LIFETIME OF ENJOYMENT TO MEET YOUR STRENGTH TRAINING NEEDS. BATCA FITNESS SYSTEMS STRIVES TO BUILD THE BEST QUALITY MULTI-STATION GYMS AND TO PACKAGE THESE GYMS IN SUCH A WAY TO AVOID ANY DAMAGE DURING SHIPPING.

IN ORDER TO GET STARTED WITH YOUR ASSEMBLY YOU SHOULD FIRST FAMILIARIZE YOURSELF WITH THIS MANUAL.

IT IS RECOMMENDED THAT YOU READ THROUGH EACH STEP THOROUGHLY BEFORE YOU BEGIN. BEGIN BY OPENING YOUR
BOXES AND SEPARATING ALL OF YOUR PARTS. VERIFY THAT ALL PARTS ARE ACCOUNTED FOR AND HAVE NO DAMAGE. WHEN
ALL PARTS ARE ACCOUNTED FOR, YOU MAY BEGIN YOUR ASSEMBLY. SOME ITEMS MAY HAVE BEEN PRE-ASSEMBLED FOR
YOUR CONVENIENCE. PLEASE NOTE THAT HARDWARE QUANTITIES SHOWN REFLECT TOTAL QUANTITIES FOR YOUR GYM AND
MAY NOT REFLECT ACTUAL QUANTITIES IN EACH BAG. ASSEMBLE YOUR GYM ON A SOLID LEVEL SURFACE. THIS WILL
ENSURE THE BEST POSSIBLE PERFORMANCE, FUNCTION, AND SAFETY FOR THE GYM AND YOUR WORKOUT.

ASSEMBLE YOUR GYM ACCORDING TO THE STEP BY STEP INSTRUCTIONS FOUND IN THIS MANUAL. FAILURE TO DO SO WILL VOID YOUR WARRANTY AND MAY RESULT IN PERSONAL INJURY. AFTER ASSEMBLY, YOU SHOULD CHECK EACH STATION TO ENSURE CORRECT OPERATION. IF A PROBLEM ARISES, RECHECK YOUR ASSEMBLY WITH THESE INSTRUCTIONS TO VERIFY CORRECT ASSEMBLY. IF YOU ARE UNABLE TO CORRECT A PROBLEM OR HAVE QUESTIONS WITH YOUR ASSEMBLY PLEASE CONTACT YOUR AUTHORIZED BATCA DEALER.

WARNING

BATCA FITNESS SYSTEMS HAS BUILT THIS GYM TO GIVE YOU A SAFE, EFFECTIVE AND ENJOYABLE WORKOUT. HOWEVER, THERE IS A RISK ASSUMED BY INDIVIDUALS WHO USE THIS TYPE OF EQUIPMENT. IT IS VERY IMPORTANT THAT ALL WARNINGS AND INSTRUCTIONS ARE READ AND FOLLOWED BEFORE BEGINNING ANY EXERCISE PROGRAM.

IT IS ALSO VERY IMPORTANT TO READ AND FOLLOW THE PREVENTATIVE MAINTENANCE SCHEDULE DESCRIBED IN THIS MANUAL. IF ANY OF THE WARNING LABELS OR STICKERS ARE WORN, FADED, TORN, SCRATCHED OR MISSING THEY SHOULD BE REPLACED IMMEDIATELY.

 $\underline{\text{WARNING}}$: There is a risk assumed by individuals who use this type of equipment. To minimize risk always follow these rules.

- 1) IT IS ESSENTIAL THAT YOU CONSULT WITH YOUR PHYSICIAN BEFORE BEGINNING ANY EXERCISE PROGRAM.
- 2) INSPECT EQUIPMENT BEFORE EACH USE FOR LOOSE, WORN, OR FRAYED PARTS (INCLUDING CABLES, NUTS AND BOLTS). REPLACE PARTS AT FIRST SIGNS OF WEAR (USE ONLY GENUINE BATCA REPLACEMENT PARTS). USE OF EQUIPMENT THAT IS DAMAGED, WORN, FRAYED OR NOT COMPLETELY ASSEMBLED ON A SOLID, LEVEL SURFACE MAY RESULT IN INJURY.
- 3) Make sure all adjustment pins are fully engaged before using equipment.
- 4) KEEP ALL PARTS OF THE BODY AND CLOTHING OUTSIDE THE PATH OF ANY MOVING PARTS OF THE GYM. BE ALERT TO THE POSSIBILITY OF INJURY. DO NOT BE CARELESS.
- 5) MINORS AND CHILDREN SHOULD NOT BE ALLOWED TO PLAY ON OR AROUND THIS GYM.
- 6) IF YOU HAVE ANY QUESTIONS ON PROPER USE OR MAINTENANCE OF THIS GYM, DO NOT HESITATE TO CALL YOUR LOCAL BATCA FITNESS SYSTEMS DISTRIBUTOR OR BATCA FITNESS SYSTEMS AT (919) 255-1233. WWW.BATCAFITNESS.COM

TABLE OF CONTENTS

	PAGE		PAGE
Instructions	2	FUNCTIONAL ARM CABLE ROUTING	20-21
PARTS LISTING	3-4	WEIGHT STACK DECALS AND SERIAL NUMBER	22
HARDWARE COMPARISON	5-8	CABLE TENSION AND ADJUSTMENTS	23-25
MAIN FRAME ASSEMBLY	9-13	FINAL ASSEMBLY AND TROUBLESHOOTING	26
CABLE ROUTING	14-17	Maintenange	27
UPHOLSTERY	18	WARRANTY	28
FUNCTIONAL ARM OPTION	19	FLOOR PLAN LAYOUT	29

FRAME COMPONENTS

ITEM	PART NO.	DESCRIPTION	ΩTY
1	BFM-10566	RIGHT VERTICAL SUPPORT	1
2	BFM-10593	Rear Base	1
3	BFM-10753	MIDDLE FRAME ASSEMBLY	1
4	BFM-10770	FRONT BASE SUPPORT	1
5	BFM-10583	Top Swivel Pulley Holder	2
6	BFM-10567	LEFT VERTICAL SUPPORT	1
7	BFM-10299	Top Weight Plate	1
8	BFM-51082	Shroud	2
9	BFM-51487	Guide Rod Holder	1
1 🗆	BFM-51051	Guide Rod	2
1 1	BFM-50256	WEIGHT STACK PLATE	19
12	BFM-50529	Rubber Donut	2
13	BFM-10733	RIGHT SWING ARM ASSEMBLY	1
14	BFM-10737	LEFT SWING ARM ASSEMBLY	1
15	BFM-10735	RIGHT PRESS ARM ASSEMBLY	1
16	BFM-10736	LEFT PRESS ARM ASSEMBLY	1
17	BFM-51148	1" Arm Shaft	1
18	BFM-51080	Spacer	1
19	BFM-10741	SEAT FRAME ASSEMBLY	1
20	BFM-10580	Back Chrome Adjustment	1
21	BFM-10577	8" Adjustment Sleeve	1
22	BFM-10579	10" Chrome Adjustment	1
23	BFM-50931	Threaded Axle	1
24	BFM-10755	Press Arm Cable Lockout	1
25	BFM-10611	Criss-Cross Free Floater	1
26	BFM-10133	FREE FLOATER	2
27	BFM-50345	4-1/2" Pulley Cover	2
28	BFM-51022	1-1/4" Pulley Spacer	6
29	BFM-50505	3-1/2" Pulley Cover	8
30	BFL-50197	MIDDLE FRAME CONNECTOR PLATE	2

ACCESSORIES

ITEM NO.	PART NO.	DESCRIPTION	QTY
31	BFM-51173	WEIGHT STACK PULL PIN	1
32	BFM-10771	Press Arm Lock	1
33	BFC-10103	STRAP HANDLE	2

UPHOLSTERY

ITEM NO.	PART NO.	DESCRIPTION	QTY
34	BFU-10118	Воттом Pad	1
35	BFU-10119	HEAD PAD	1
36	BFU-10120	BACK PAD WITH LUMBAR	1
37	BFU-50189	7" UPHOLSTERY ROLLER	2

CABLES

ITEM	PART NO.	DESCRIPTION	QTY
38	CAB-13022	WEIGHT STACK TO CABLE TIE OUT	1
39	CAB-13030	Fusion Floating Pulley Cable	1
40	CAB-13031	Fusion Lat Pull to Cable Lockout	2
86	CAB-13032	Fusion Lat Pull to Functional	2
		Arm	

HARDWARE

ITEM NO.	PART NUMBER	DESCRIPTION	ΦΤΥ
41	BFH-50253	BEVELED LEVELER	2
42	BFH-50337	WAVY WASHER	4
43	BFH-50165	1" Snap Ring	6
44	BFH-50149	3/8" JAM NUT	2
45	BFP-52394	SHCS 3/8"-16 x 2-1/2"	2
46	BFP-51799	SHCS 3/8"-16 x 5"	4
47	BFP-51756	SHCS 3/8"-16 x 5-1/4"	6
48	BFH-50146	3/8" FLAT WASHER	74
49	BFH-50147	3/8" Lock Washer	14
50	BFH-50157	3/8" NyLock	39
51	BFP-52340	SHCS 3/8"-16 x 3/4"	2
52	BFP-52401	BHSCS 3/8"-16 x 1/2"	4
53	BFH-50144	FHSCS 3/8"-16 x 3/4"	2
54	BFH-50220	Shaft Collar	2
55	BFP-52400	SHCS 1/2"-13 x 4 1/4"	1
56	BFH-51201	SHCS1/2"-13x3 1/2"	1
57	BFP-51747	SHCS 3/8"-16 x 3"	2
58	BFH-50251	1/2" FLAT WASHER	2

IIEM NO.	PARI NUMBER	DESCRIPTION	WIY
60	BFP-51653	SHCS 3/8"-16 x 1-1/4"	4
61	BFH-50173	3-1/2" Pulley	16
62	BFH-50174	4 1/2" Pulley	6
63	BFH-50250	1-1/4" SHOULDER BOLT	3
64	BFH-50267	5/16" NyLock	3
65	BFP-51752	SHCS 3/8"-16 x 2-1/4"	8
66	BFH-50204	3/8" Curved Washer	4
67	BFH-50203	1/2" CURVED PULLEY SPACER	8
68	BFP-51759	SHC5 3/8"-16 x 2"	4
69	BFP-51750	SHCS 3/8"-16 x 2-3/4"	8
70	BFP-51753	SHCS 3/8"-16 x 4-3/4"	6
71	BFH-50622	Roller End Cap	2
72	BFP-52430	BHSCS 3/8"-16 x 3/4"	2
73	BFP-52398	SHC5 3/8"-16 x 7"	1
74	BFP-52397	SHC5 1/2"-13 x 3"	1
87	BFH-50192	WEIGHT STACK DECALS	1
88	BFH-50262	SILICON GEL PACK	1

FUNCTIONAL ARM COMPONENTS

ITEM NO.	PART NUMBER	DESCRIPTION	QΤΥ
74	BFM-10573	Functional Arm Mount	1
75	BFM-10571	User Right Functional Arm	1
76	BFM-10572	USER LEFT FUNCTIONAL ARM	1
77	BFM-10582	Functional Arm Swivel Pulley	2

FUNCTIONAL ARM HARDWARE

ITEM NO.	PART NUMBER	DESCRIPTION	ΦTY
79	BFH-50146	3/8" Flat Washer	16
80	BFH-50157	3/8" NyLock	14
81	BFH-50173	3-1/2" Pulley	8
82	BFP-51752	SHCS 3/8"-16 x 2-1/4"	8
83	BFP-51759	SHCS 3/8"-16 x 2"	6

FUNCTIONAL ARM ACCESSORIES

ITEM NO.	PART NUMBER	DESCRIPTION	QTY
84	BFH-10103	Strap Handle	2

CABLES

ITEM NO.	PART NUMBER	DESCRIPTION	QΤΥ
85	CAB-13032	Fusion Lat Pull to Functional Arm	2

TOOLS REQUIRED

 
- 1/2" WRENCH
- 9/16" WRENCH
- 9/16" RATCHET
- 3/4" WRENCH
- 3/4" RATCHET
- ALLEN WRENCH SET
- TAPE MEASURE
- SNAP RING PLIERS



3/8" SOCKET HEAD CAP SCREW (SIZES LISTED IN CHART)

FLAT HEAD SOCKET CAP SCREW (SIZES LISTED IN CHART)

PART #	BOLT SIZE
BFP-52340	3/8" x 3/4"
BFP-52376	3/8" X 1"
BFP-51653	3/8" x 1 1/4"
BFP-51697	3/8" x 1 1/2"
BFP-51759	3/8" x 2"
BFP-51752	3/8"×2 1/4"
BFP-51750	3/8" x 2 3/4"
BFP-51747	3/8" x 3"
BFP-51748	3/8" x 3 1/4"
BFP-51760	3/8" x 3 1/2"
BFP-52345	3/8" x 4"
BFP-51884	3/8" X 4 1/4"
BFP-51751	3/8"×4 1/2"
BFP-51753	3/8"×4 3/4"
BFP-51799	3/8" x 5"
BFP-51756	3/8" x 5 1/4"
BFP-52364	3/8" x 6"





HEX HEAD CAP SCREW (HCS) 3/8" x 3/4" (BFH-50254)



BUTTON HEAD SOCKET CAP SCREW (BHSCS) 3/8" x 3/4" BFP-52430



1/2" Shoulder Bolt BFH-50249



1 1/4" SHOULDER BOLT BFH-50250



ZINC PLATED SHCS 5/16" x 1/2" (BFP-52372)



5/16"-18 NYLOCK BFH-50267



3/8"-16 Thin NYLOCK BFH-50247



3/8"-16 NYLOCK 1/2"-13 NYLOCK BFH-50157




BFH-50251





1/2" JAM NUT BFH-50256

 


3/8" JAM NUT BFH-50149

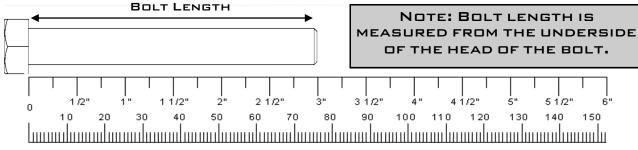

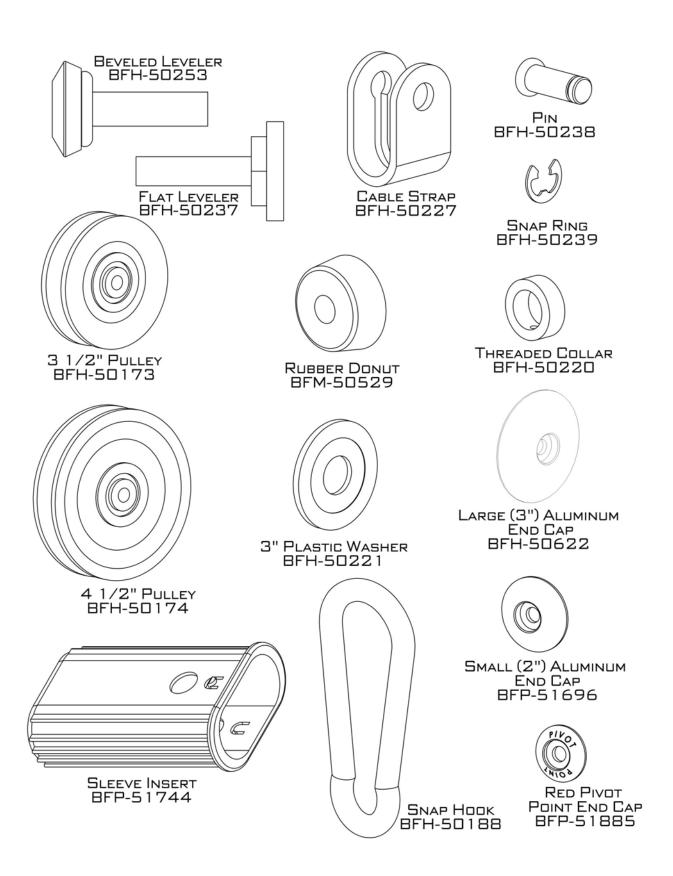

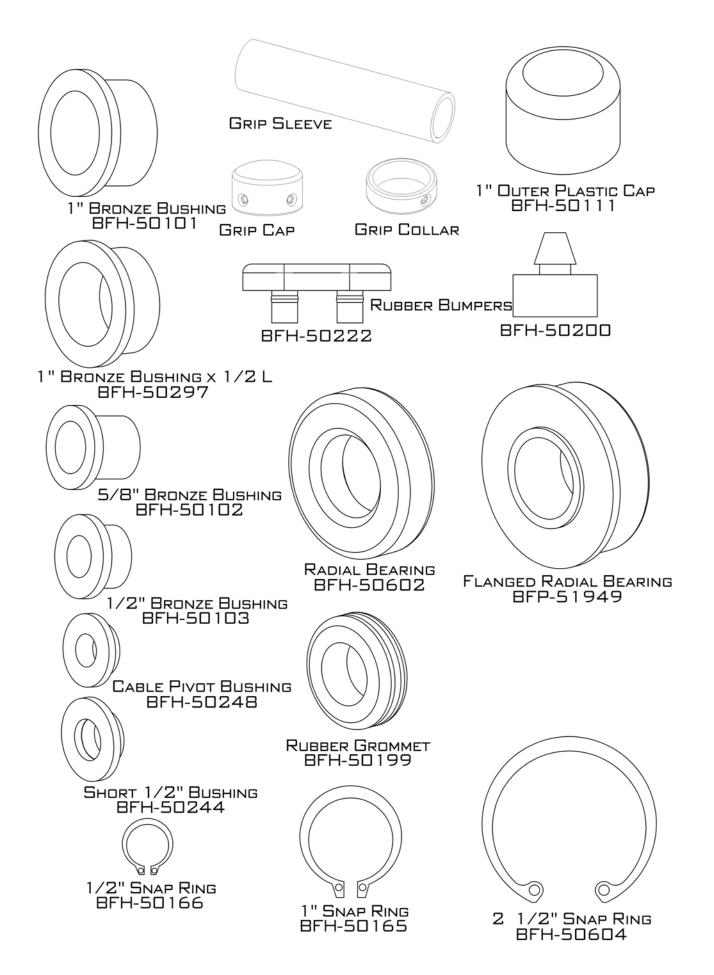










(BFP-52101)

 

1/2" LONG PULL PIN BFM-51172

 

3/8" SHORT PULL PIN BFM-51175

 


3/8" FENDER WASHER BFH-50242



BFH-50146



 3/8" FLAT WASHER 3/8" CURVED WASHER SCREW CAP COVER BFH-50204



BFH-50112



BFH-50113



BFH-50147



3/8" LOCK WASHER MAGNETIC WEIGHT STACK PIN BFM-51173



ITEMS NOT SHOWN.

PART #	DESCRIPTION
BFH-50259	MIDNIGHT BLACK PAINT
BFH-50278	SILVER METALLIC PAINT
BFH-50198	LARGE LOGO
BFH-50236	FOAM GRIP
BFH-50262	SILICON GEL PACK
BFC-10101	1 INCH CHAIN
BFC-10102	12 INCH CHAIN

SIDE MOUNTED FLANGE BEARING BFH-50171



LINEAR BEARING BFH-50627

BAR CATCH RUBBER SLEEVE BFH-50240



BEARING RETAINING CLIP BFH-50628




PLEASE FOLLOW ALL DIRECTIONS VERY CAREFULLY FOR PROPER INSTALLATION.

STEP 1:



NOTE: FOR A MORE CONSISTENT APPEARANCE, POSITION ALL BOLTS IN THE DIRECTION SHOWN IN EACH

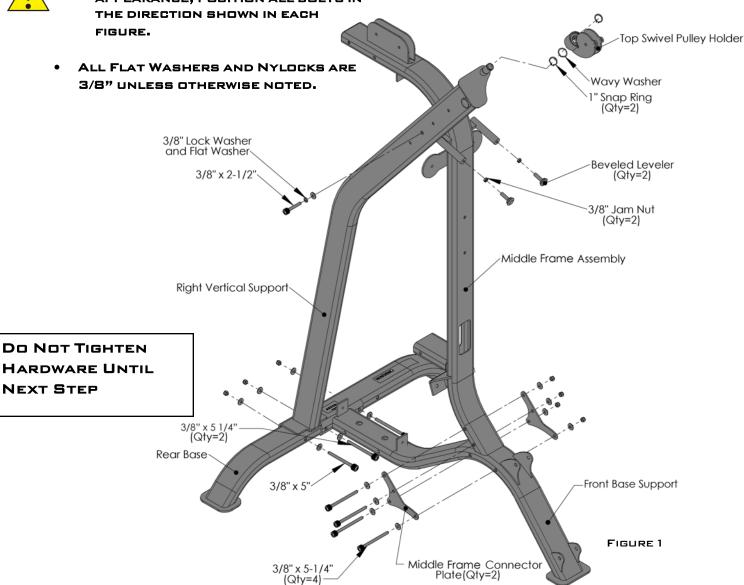


ITEM#	PART #	DESCRIPTION	QΤΥ	Ітем#	PART #	DESCRIPTION	QTY
1	BFM-10566	RIGHT VERTICAL SUPPORT	1	44	BFH-50149	3/8" JAM NUT	2
2	BFM-10593	Rear Base	1	45	BFP-52394	SHCS 3/8"-16 x 2 1/2"	1
3	BFM-10753	MIDDLE FRAME ASSEMBLY	1	46	BFP-551799	SHCS 3/8"-16 x 5"	1
4	BFM-10770	FRONT BASE SUPPORT	1	47	BFP-51756	SHCS 3/8"-16 x 5 1/4"	6
5	BFM-10583	Top Swivel Pulley Holder	1	48	BFH-50146	3/8" FLAT WASHER	15
30	BFL-50197	MIDDLE FRAME CONNECTOR PLATE	2	49	BFH-50147	3/8" LOCK WASHER	1
41	BFH-50253	Beveled Leveler	2	50	BFH-50157	3/8" NyLock	7
42	BFH-50337	WAVY WASHER	1				


43

2

1" SNAP RING

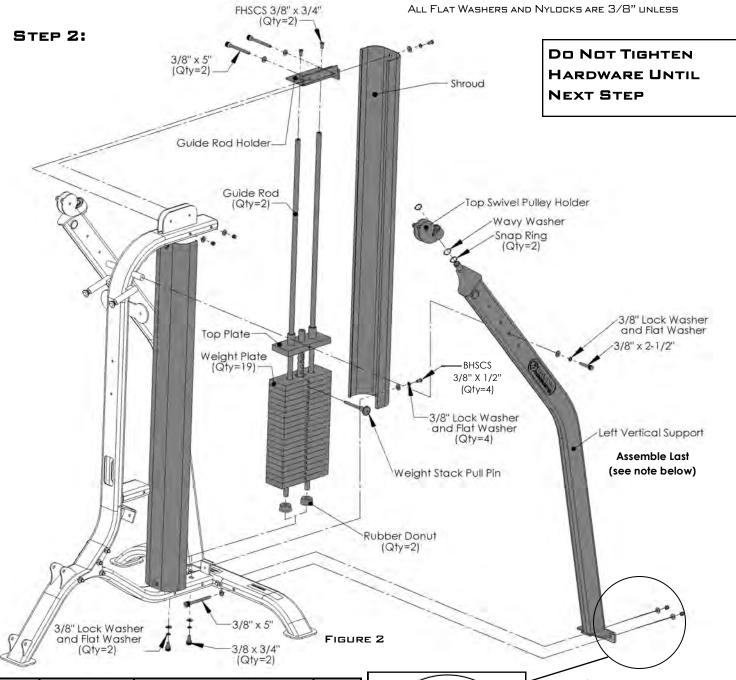

ITEM#	PART #	DESCRIPTION	QTY
5	BFM-10583	Top Swivel Pulley Holder	1
6	BFM-10567	LEFT VERTICAL SUPPORT	1
7	BFM-10299	Top Weight Plate	1
8	BFM-51082	SHROUD	2
9	BFM-51487	Guide Rod Holder	1
1 🗆	BFM-51051	Guide Rad	2
1 1	BFM-50256	WEIGHT STACK PLATE	19
12	BFM-50529	Rubber Donut	2
31	BFM-51173	WEIGHT STACK PULL PIN	1
42	BFH-50337	WAVY WASHER	1
43	BFH-50165	1" Snap Ring	2
45	BFP-52394	SHCS 3/8"-16 x 2 1/2"	1
46	BFP-51799	SHCS 3/8"-16 x 5"	3
48	BFH-50146	3/8" FLAT WASHER	13

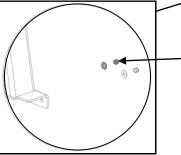


THIS 3/8" NYLOCK AND FLAT WASHER ARE FROM STEP 1.

DO NOT REMOVE THE NY-LOCK OR INSTALL THE <u>LEFT</u> <u>VERTICAL SUPPORT</u> UNTIL THE <u>WEIGHT STACK</u> AND THE <u>SHROUDS</u> HAVE BEEN COMPLETELY ASSEMBLED.

ITEM#	PART #	DESCRIPTION	QTY
49	BFH-50147	3/8" Lock Washer	7
50	BFH-50157	3/8" Nylock	3
51	BFP-52340	SHCS 3/8"-16 x 3/4"	2
52	BFP-52401	BHSCS 3/8"-16 x 1/2"	4
53	BFH-50144	FHSCS 3/8"-16 x 3/4"	2

STEP 3:

MAKE SURE ALL
HARDWARE IS
TIGHTENED BEFORE
NEXT STEP.

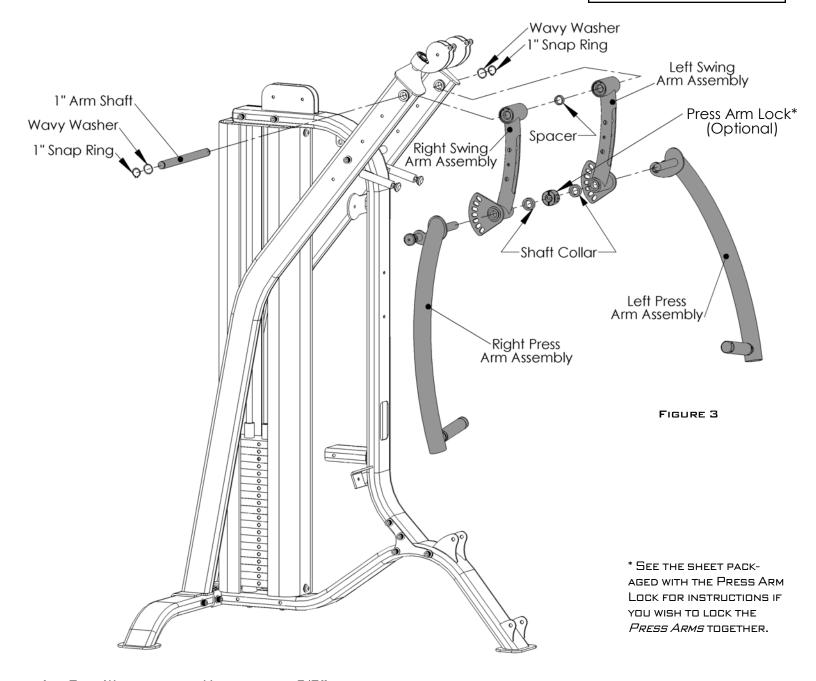


ALL FLAT WASHERS AND NYLOCKS ARE 3/8" UNLESS OTHERWISE NOTED.

ITEM#	PART #	DESCRIPTION	QΤΥ
13	BFM-10733	RIGHT SWING ARM ASSEMBLY	1
14	BFM-10737	LEFT SWING ARM ASSEMBLY	1
15	BFM-10735	RIGHT PRESS ARM ASSEMBLY	1
16	BFM-10736	LEFT PRESS ARM ASSEMBLY	1
17	BFM-51148	1" ARM SHAFT	1
18	BFM-51080	Spacer	1

Item #	Part #	Description	Qty
32	BFM-10771	Press Arm Lock	1
42	BFH-50337	WAVY WASHER	2
43	BFH-50165	1" Snap Ring	2
54	BFH-50220	SHAFT COLLAR	2

STEP 4:

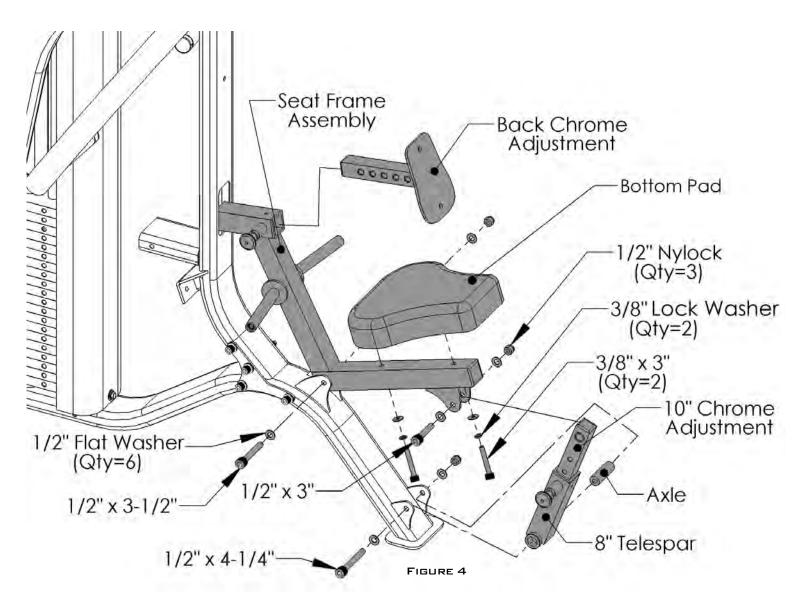

ITEM#	PART #	DESCRIPTION	QTY
34	BFU-50118	Воттом Pad	1
19	BFM-10741	SEAT FRAME ASSEMBLY	1
20	BFM-10580	Back Chrome Adjustment	1
21	BFM-10577	8" Adjustment Sleeve	1
22	BFM-10579	10" Chrome Adjustment	1
23	BFM-50931	Threaded Axle	1
48	BFH-50146	3/8" FLAT WASHER	2
49	BFH-50147	3/8" Lock Washer	2
55	BFP-52400	SHCS 1/2"-13 x 4 1/4"	1
56	BFH-51201	SHCS1/2"-13 x 3 1/2"	1
57	BFP-52397	SHCS 3/8"-16 x 3"	2
58	BFH-50251	1/2" FLAT WASHER	2
50	BFH-50157	3/8" NyLock	2
74	BFH-50136	SHCS 1/2"-13 x 3"	1


NOTE: MAKE SURE THE BOTTOM PAD IS BOLTED ON BEFORE THE SEAT FRAME ASSEMBLY IS INSTALLED.

ALL FLAT WASHERS AND NYLOCKS ARE 3/8" UNLESS OTHERWISE NOTED.

STEP 5:



NOTE: If Functional Arm Option is purchased then skip this step

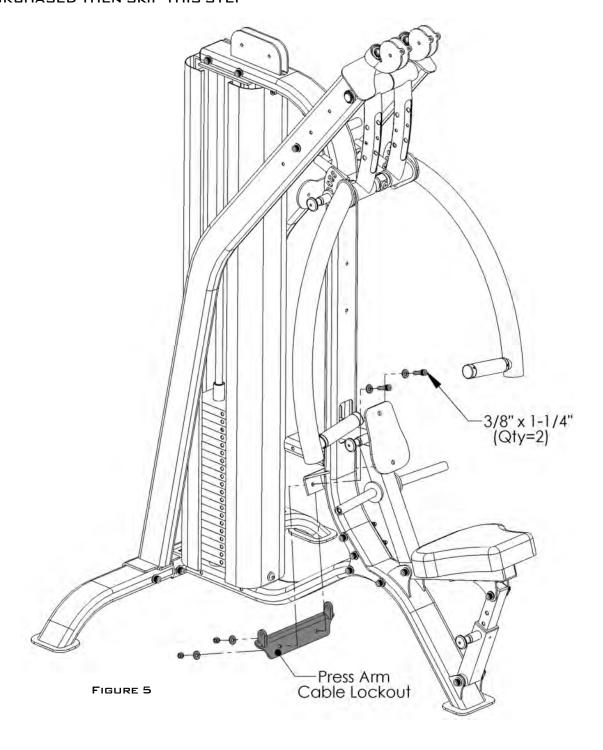



ALL FLAT WASHERS AND NYLOCKS ARE 3/8" UNLESS OTHERWISE NOTED.

ITEM#	PART #	DESCRIPTION	QTY
24	BFM-10755	Press Arm Cable Lockout	1
48	BFM-50146	3/8" FLAT WASHER	4
50	BFM-50157	3/8" Nylock	2
60	BFP-51653	SHCS 3/8"-16 x 1 1/4"	2

CABLE ROUTING

 STEP 6:

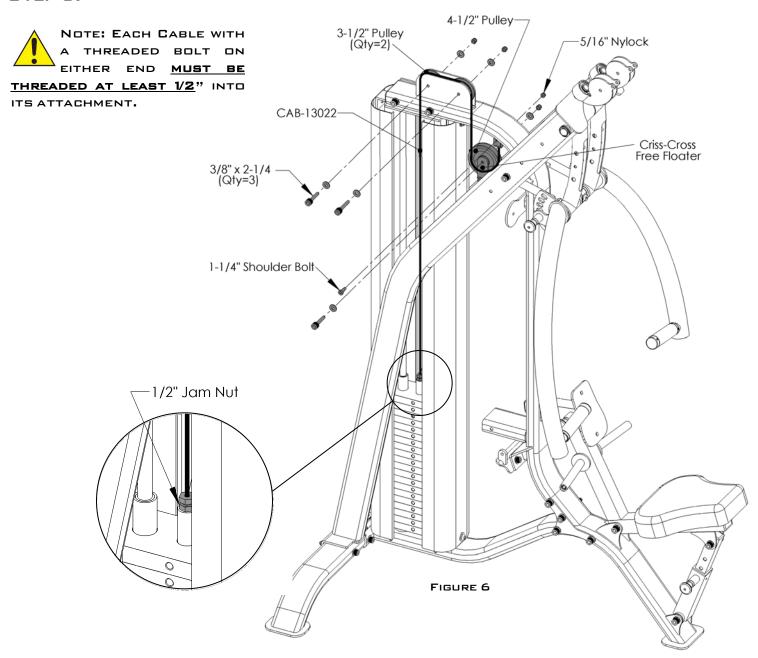





ALL FLAT WASHERS AND NYLOCKS ARE 3/8" UNLESS OTHERWISE NOTED.

ITEM#	PART #	DESCRIPTION	QTY
25	BFM-10611	Criss-Cross Free Floater	1
38	CAB-13022	WEIGHT STACK TO CABLE TIE OUT	1
48	BFH-50146	3/8" FLAT WASHER	6
50	BFH-50157	3/8" NyLock	ញ
61	BFH-50173	3 1/2" Pulley	Ζ
62	BFH-50174	4 1/2" Pulley	1
63	BFH-50250	1 1/4" Shoulder Bolt	1
64	BFH-50267	5/16" Nylock	1
65	BFP-51752	SHCS 3/8"-16 x 2 1/4"	3

 STEP 7:

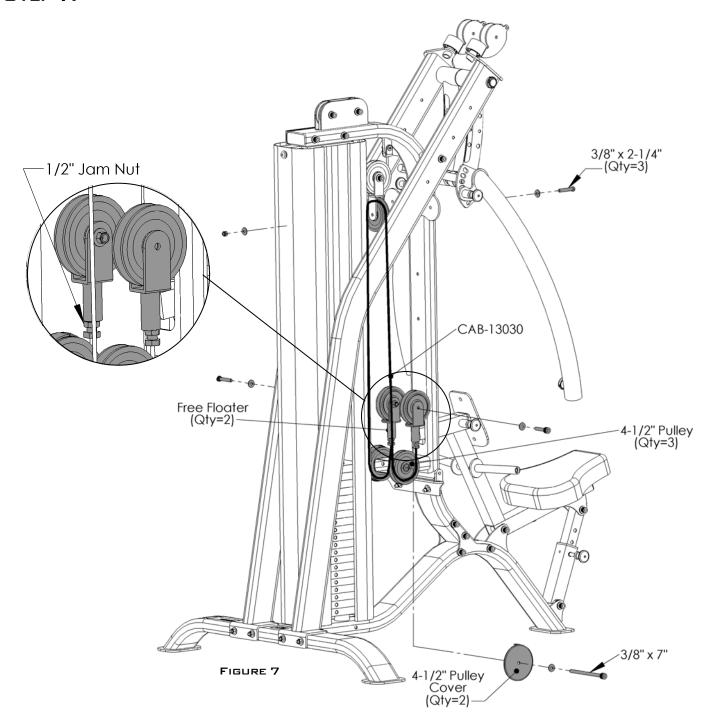




ALL FLAT WASHERS AND NYLOCKS ARE 3/8" UNLESS OTHERWISE NOTED.

ITEM#	PART #	DESCRIPTION	QΤΥ
26	BFM-10133	FREE FLOATER	2
27	BFM-50345	4 1/2" Pulley Cover	2
39	CAB-13030	Fusion Floating Pulley Cable	1
45	BFP-51653	SHCS 3/8"-16 x 2 1/4"	3
48	BFH-50146	3/8" FLAT WASHER	8
50	BFH-50157	3/8" Nylock	4
62	BFH-50174	4 1/2" Pulley	5
73	BFP-52398	SHCS 3/8"-16 x 7"	1


STEP 8:



NOTE: IF FUNCTIONAL ARM OPTION IS PURCHASED SKIP THIS STEP.

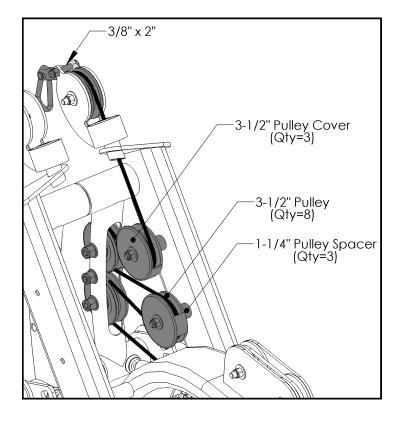

 NOTE: EACH CABLE WITH A
THREADED BOLT ON EITHER END MUST
BE THREADED AT LEAST 1/2" INTO ITS
ATTACHMENT.




ALL FLAT WASHERS AND NYLOCKS ARE 3/8" UNLESS OTHERWISE NOTED.

ITEM			
#	PART #	DESCRIPTION	QΤΥ
		Fusion Lat Pull to Cable	
4□	CAB-13031	Lockout	1
28	BFM-51022	1 1/4" Pulley Spacer	3
29	BFM-50505	3 1/2" Pulley Cover	4
48	BFH-50146	3/8" FLAT WASHER	1 🗆
50	BFH-50157	3/8" Nylock	9
61	BFH-50173	3 1/2" Pulley	7
63	BFH-50250	1 1/4" Shoulder Bolt	1

ITEM				
#	PART# DESCRIPTION			
64	BFH-50267	5/16" NyLock	1	
66	BFH-50204	3/8" Curved Washer	Z	
67	BFH-50203	3/8" Curved Pulley Spacer	4	
68	BFP-51759	SHCS 3/8"-16 x 2"	2	
69	BFP-51750	SHCS 3/8"-16 x 2 3/4"	Ξ	
65	BFP-51752	SHCS 3/8"-16 x 2 1/4"	1	
70	BFP-51753	SHCS 3/8"-16 x 4 3/4"	3	


CAB-13031

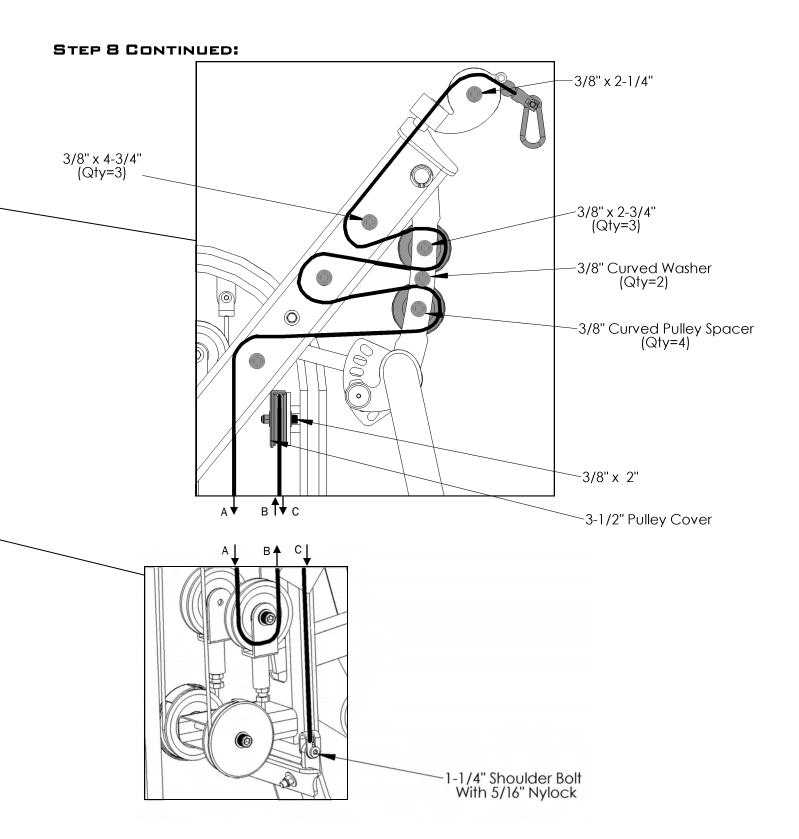

ALL FLAT WASHERS AND NYLOCKS ARE 3/8" UNLESS OTHERWISE NOTED.

STEP 9: REPEAT FOR ALTERNATE SIDE OF FUSION. USE SAME BILL OF MATERIALS FROM STEP 8 FOR STEP 9. USE CAB-13031, FUSION LAT PULL TO CABLE LOCKOUT.

STEP 10:

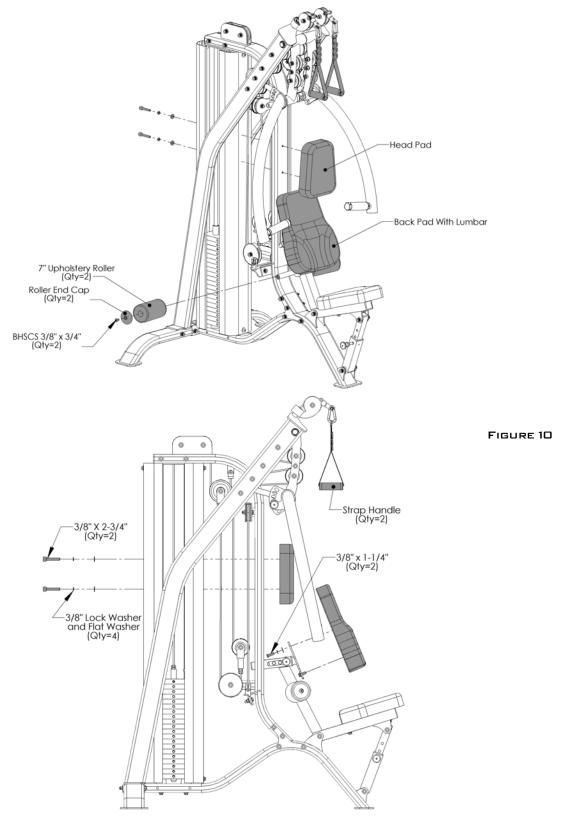


ITEM#	PART #	DESCRIPTION	QTY
33	BFC-10103	STRAP HANDLE	2
35	BFU-10119	HEAD PAD	1
36	BFU-10120	Back Pad With Lumbar	1
37	BFU-50189	7" Upholstery Roller	2
48	BFH-50146	3/8" FLAT WASHER	4

ITEM#	PART #	DESCRIPTION	QΤΥ
49	BFH-50147	3/8" Lock Washer	4
60	BFP-51653	SHCS 3/8"-16 x 1 1/4"	2
69	BFP-51750	SHCS 3/8"-16 x 2 3/4"	2
71	BFH-50622	ROLLER END CAP	2
72	BFH-50620	BHSCS 3/8"-16 x 3/4"	2

ALL FLAT WASHERS AND NYLOCKS ARE 3/8" UNLESS OTHERWISE NOTED.

FUNCTIONAL ARM OPTION

STEP 11:

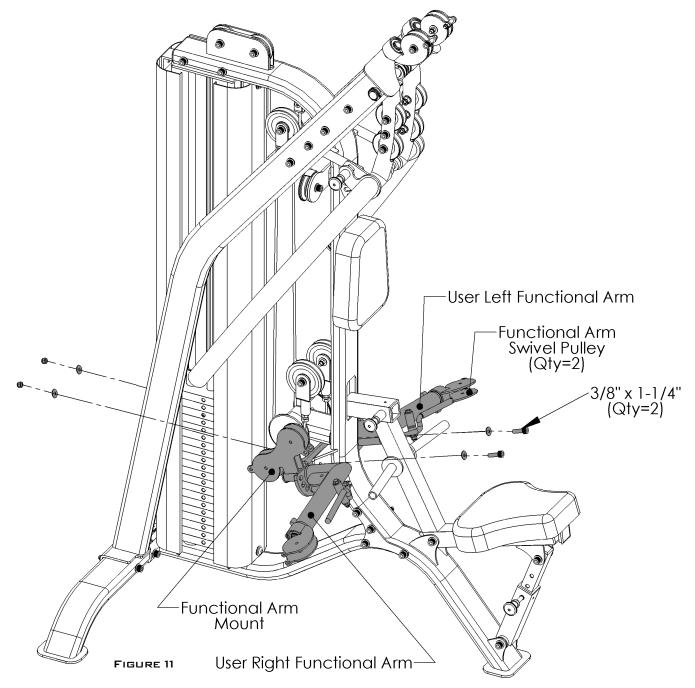

ALL FLAT WASHERS AND NYLOCKS ARE 3/8"
UNLESS OTHERWISE NOTED.

ITEM#	PART #	DESCRIPTION	QTY
74	74 BFM-10573 Functional Arm Mount		1
75	BFM-10571	User Right Functional Arm	1
76	BFM-10572	User Left Functional Arm	1
77	BFM-10582	FUNCTIONAL ARM SWIVEL PULLEY	Z
48	BFH-50146	3/8" FLAT WASHER	4
50	BFH-50157	3/8" NyLock	2
60	BFP-51653	SHCS 3/8"-16 x 1 1/4"	2


STEP 12:


NOTE: EACH CABLE WITH A

 
THREADED BOLT ON EITHER END

MUST BE THREADED AT LEAST 1/2"

INTO ITS ATTACHMENT.

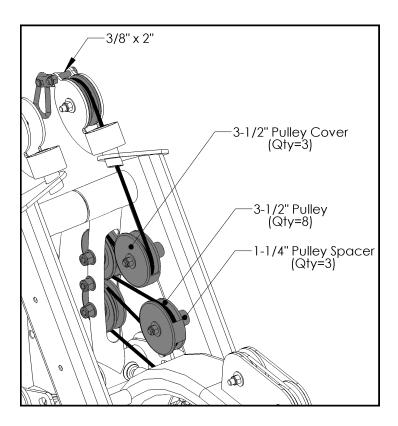

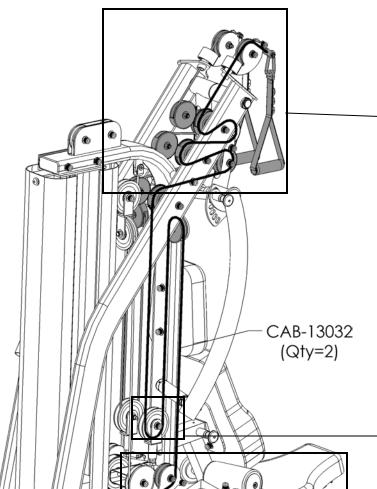




		#11		
ITEM#	PART#	DESCRIPTION	QTY	
28	BFM-51022	1 1/4" Spacer	3	
29	BFM-50505	3 1/2" Pulley Cover	4	
33	BFC-10103	STRAP HANDLE	2	
86	CAB-13032	FUSION LAT PULL TO FUNCTIONAL ARM	1	
48	BFH-50146	3/8" FLAT WASHER	18	
50	BFH-50157	3/8" Nylock	16	
61	BFH-50173	3 1/2" Pulley	11	
65	BFP-51752	SHCS 3/8"-16 X 2 1/4"	5	
66	BFH-50204	3/8" Curved Washer	2	
67	BFH-50203	1/2" Curved Pulley Spacer	4	
68	BFP-51759	SHCS 3/8"-16 X 2"	5	
69	BFP-51750	SHCS-3/8"-16 x 2-3/4"	3	
70	BFP-51753	SHCS 3/8"-16 X 4 3/4"	3	

ALL FLAT WASHERS AND NYLOCKS ARE 3/8" UNLESS OTHERWISE NOTED.


Strap Handle (Qty=4) —

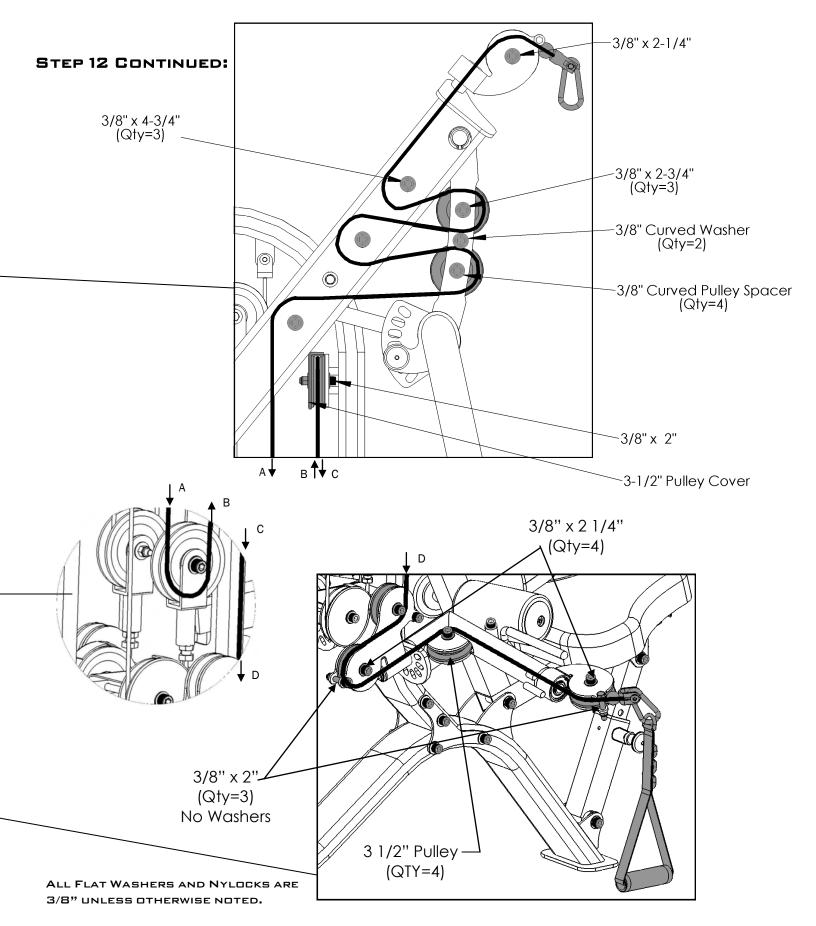


STEP 13: REPEAT FOR ALTERNATE SIDE OF FUSION. USE SAME BILL OF MATERIALS FROM STEP 12 FOR STEP 13. USE CAB-13032, FUSION LAT PULL TO FUNCTIONAL ARM.

STEP 14:

WEIGHT STACK DECALS:

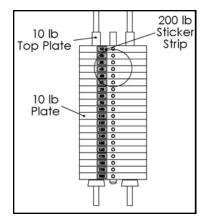

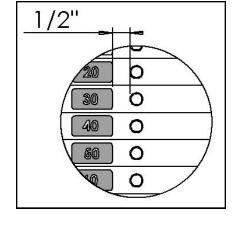


200lb Stack (Standard)

GUIDE ROD LUBRICATION:


• CLEAN GUIDE RODS WITH A LINT-FREE CLOTH AND APPLY A THIN LAYER OF SILICON LUBRICANT (PART # BFH-50262) TO EACH GUIDE ROD. THIS WILL ENSURE A GLASS SMOOTH PERFORMANCE FROM YOUR WEIGHT STACK.


SERIAL NUMBER:

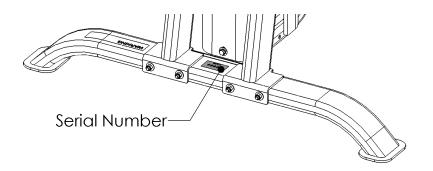

RECORD YOUR SERIAL NUMBER ON THE FRONT OF THIS MANUAL AND KEEP FOR YOUR
 RECORDS. THE SERIAL NUMBER CAN BE FOUND ON THE BACK OF THE CAGE AS SEEN IN
 THE FIGURE.

Cable Adjustments

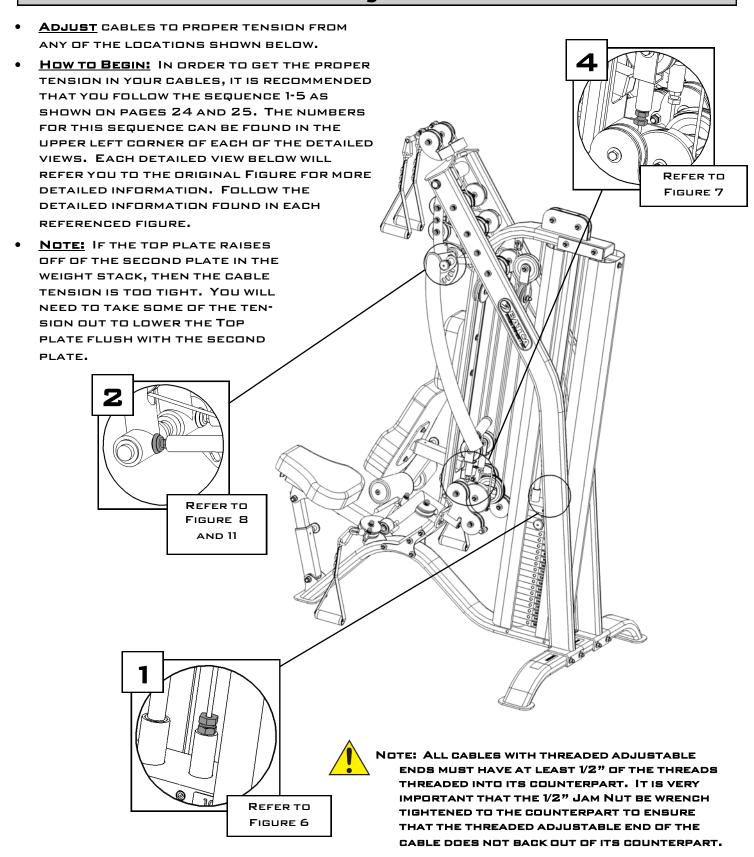


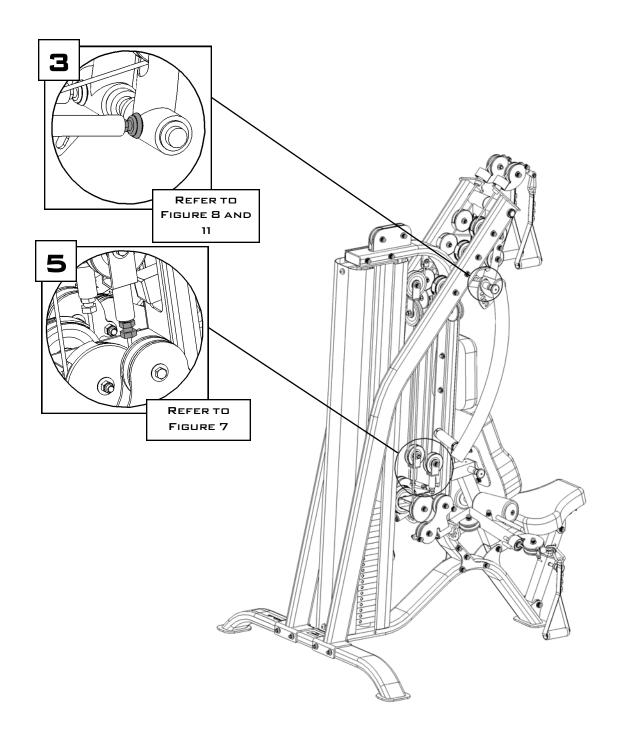






NOTE: ALL LEVELERS SHOULD HAVE AT LEAST 1/2" OF THE THREADS THREADED IN TO ITS COUNTERPART. IT IS VERY IMPORTANT THAT THE 3/8" JAM NUT BE WRENCH TIGHTENED TO THE COUNTERPART TO ENSURE THAT THE LEVELER DOES NOT BACK OUT OF THE COUNTERPART.

    CABLE COMPARISON CHART









CABLES

ITEM			
HEM	PART NUMBER	DESCRIPTION	ŲΤΥ
38	CAB-13022	Weight Stack to Cable Tie Out	1
39	CAB-13030	Fusion Floating Pulley Cable	1
40	CAB-13031	Fusion Lat Pull to Cable Lockout	2
86	CAB-13032	Fusion Lat Pull to Functional Arm	2




Note: Cables Cab-13022, Cab-13031, and Cab-13032 have removable Cable Strap (BFH–50227) ends to make cable routing easier. The Cable Strap ends can be found packaged with the hardware.

FINAL ASSEMBLY AND TROUBLESHOOTING


IMPORTANT - CHECKTHESE COMPONENTS BEFORE USING GYM:

POSITION THE CABLE GUARD TAB ON THE PULLEY COVER SO THAT THE TAB PREVENTS THE CABLE FROM COMING OUT OF IT'S TRACK ON THE 3 1/2" PULLEY. AN EXAMPLE OF THIS POSITIONING CAN BE SEEN IN THE FIGURE TO THE RIGHT. THE CABLE GUARD TAB SHOULD BE POSITIONED SO THAT IT IS IN THE MIDDLE OF THE CABLE WRAP ON THE 3 1/2" PULLEY, BETWEEN POINTS "A" AND "B". THIS WILL ALLOW BETTER PROTECTION AND PREVENT THE CABLE FROM RUBBING THE CABLE GUARD TAB. REFER TO STEPS 8, 9, 12, AND 13.

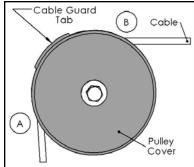


Pulley Cover BFM-50345

• EACH CABLE WITH A THREADED BOLT ON EITHER END MUST BE THREADED AT LEAST 1/2" INTO ITS ATTACHMENT, WHETHER IT BE A FREE FLOATER, LOCKOUT FREE FLOATER, OR THE TOP PLATE OF THE WEIGHT STACK. EACH MUST ALSO BE SECURED WITH A 1/2" JAM NUT TO ENSURE A SAFE AND PROPER CONNECTION. REFER TO STEPS 6, 7, 8, 9, 12, AND 13. SEE FIGURES BELOW.

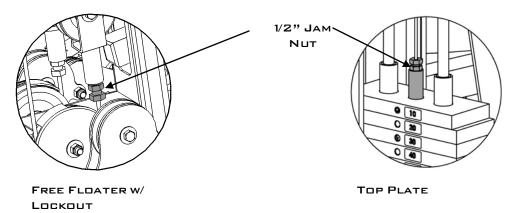

• EACH ADJUSTMENT LEVELER MUST BE THREADED 1/2" INTO ITS COUNTERPART. EACH MUST BE SECURED WITH A 3/8" JAM NUT TO ENSURE A SAFE PROPER CONNECTION. REFER TO STEPS 3, 8, 9, 12, AND 13. SEE FIGURES BELOW.

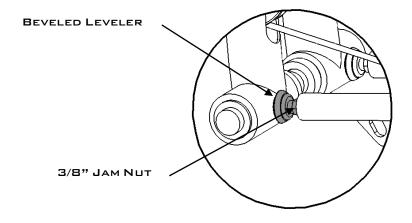

PREVENTIVE MAINTENANCE

BATCA FITNESS SYSTEMS STRIVES TO GIVE YOU THE VERY BEST IN QUALITY, PERFORMANCE AND SAFETY THROUGH CAREFULLY ENGINEERED DESIGNS AND EXCELLENT WORKMANSHIP. IN ORDER TO MAINTAIN THIS HIGH LEVEL OF QUALITY THE PREVENTATIVE MAINTENANCE SCHEDULE BELOW SHOULD BE FOLLOWED.

CLEAN UPHOLSTERY, GRIPS, AND ROLLER PADS WITH MILD SOAP AND WATER GENERALLY AFTER EVERY USE. THE GUIDE RODS, CHROME SLIDES AND FRAME SHOULD BE CLEANED WITH A COTTON CLOTH. UPON CLEANING THE GUIDE RODS, A THIN LAYER OF SILICONE OR TEFLON GEL SHOULD BE APPLIED TO EACH ROD TO ENSURE A GLASS SMOOTH PERFORMANCE.

AN OVERALL INSPECTION SHOULD BE DONE BEFORE EACH WORKOUT. IF THE WARNING AND SAFETY DECALS ARE WORN OR HAVE BEEN REMOVED THEY SHOULD BE REPLACED IMMEDIATELY. THE CABLES AND CABLE SYSTEMS SHOULD BE INSPECTED FOR SIGNS OF WEAR AND PROPER TENSION. IN ORDER TO CHECK CABLES PROPERLY YOU SHOULD CAREFULLY RUN THE CABLE THROUGH YOUR FINGERTIPS, CHECKING FOR SIGNS OF WEAR, CRACKS, BURS AND THINNING SPOTS. REPLACE ANY PART AT FIRST SIGNS OF WEAR. CABLES SHOULD BE ADJUSTED FOR PROPER TENSION. SEE ASSEMBLY INSTRUCTIONS FOR THIS DETAIL. ALL HARDWARE, STOPS, AND ADJUSTMENTS SHOULD BE CHECKED AND TIGHTENED AS REQUIRED.

THE GUIDE RODS ON YOUR MACHINE SHOULD BE CLEANED AND LUBRICATED REGULARLY. THIS WILL ENSURE A GLASS SMOOTH PERFORMANCE FROM YOUR WEIGHT STACK. A THIN LAYER OF EITHER SILICONE OR TEFLON GEL SHOULD APPLIED TO EACH ROD. EACH PILLOW BLOCK BEARING AND FLANGE BEARING HAS A GREASE FITTINGS THAT MUST BE LUBRICATED REGULARLY. USE GENERAL PURPOSE BEARING GREASE AND FOLLOW THE SCHEDULE BELOW.

ALTHOUGH CABLES SHOULD BE INSPECTED DAILY, IT IS IMPORTANT THAT ALL CABLES BE REPLACED AS DIRECTED IN THE SCHEDULE BELOW. PLEASE NOTE THAT AT ANY FIRST SIGN OF WEAR THE CABLE SHOULD BE REPLACED IMMEDIATELY.

IF THERE ARE ANY QUESTIONS CONCERNING MAINTENANCE, PLEASE CONTACT YOUR LOCAL BATCA DEALER OR CONTACT BATCA FITNESS SYSTEMS DIRECTLY AT:

BATCA FITNESS SYSTEMS

(919) 255-1233

WWW.BATCAFITNESS.COM

	DAILY	WEEKLY	Monthly	QUARTERLY	YEARS
GLEAN					
UPHOLSTERY		×			
HAND GRIPS		×			
ROLLER PADS		×			
Guide Rods			x		
CHROME SLIDES			×		
FRAME			×		
INSPECT					
OVERALL	x				
SAFETY DECALS	×				
CABLES	×				
Cable Tension			×		
Pulleys	×				
HARDWARE	×				
Stops	×				
UPHOLSTERY	×				
HAND GRIPS			×		
FRAME			×		
Bushings		×			
Bearings		x			
LUBRICATE					
Guide Rods			x		
BEARINGS					1
REPLACE					
CABLES					3

LIMITED LIFETIME WARRANTY

WHAT IS COVERED

FOR RESIDENTIAL USE:

BATCA FITNESS SYSTEMS WARRANTS ALL OF ITS PRODUCTS AGAINST DEFECTS IN MANUFACTURING, MATERIALS AND WORKMANSHIP UNDER NORMAL USE AND SERVICE FOR ONE YEAR FROM DATE OF PURCHASE INCLUDING PAINT, CHROME, UPHOLSTERY AND GRIPS. BATCA FITNESS SYSTEMS ALSO WARRANTS ALL CABLES, BELTS, BOLTS, NUTS, CAPS, PLUGS, BUMPERS, WASHERS, LEVELERS, DECALS, GAS SPRINGS AND OTHER HARDWARE FOR THREE YEARS AFTER DATE OF PURCHASE; ALL MOVING PARTS, INCLUDING PULLEYS, BUSHINGS, BEARINGS AND PULL PINS FOR FIVE YEARS AFTER DATE OF PURCHASE AND WARRANTS THE FRAME AND ALL WELDED PARTS FOR THE LIFETIME OF THE ORIGINAL PURCHASER.

WHAT IS NOT COVERED

THIS WARRANTY DOES NOT COVER DAMAGE, WHICH RESULTS FROM SHIPPING, MISUSE, ABUSE, NEGLECT, CARELESSNESS, MODIFICATION OR ALTERATION, ACCIDENT, FIRE, FLOOD, "ACTS OF GOD" OR OTHER CONTINGENCIES BEYOND THE CONTROL OF BATCA FITNESS SYSTEMS. THIS WARRANTY ALSO DOES NOT COVER DETERIORATION FROM WEAR AND TEAR OR EXPOSURE OR ANY DEFECT, WHICH WOULD NOT HAVE HAPPENED IF INSTRUCTIONS IN THE OWNER'S MANUAL HAD BEEN FOLLOWED. IMPROPER INSTALLATION, IMPROPER ASSEMBLY OR FOLLOW-UP MAINTENANCE ALONG WITH INSTALLATION OF PARTS OR ACCESSORIES NOT ORIGINALLY INTENDED FOR PRODUCTS OF BATCA FITNESS SYSTEMS ARE ALSO NOT COVERED BY THIS WARRANTY. ONLY GENUINE BATCA PARTS SHOULD BE USED FOR REPLACEMENT, REPAIR, AND MAINTENANCE FOR THIS WARRANTY TO APPLY.

DEFECTIVE PARTS WILL BE REPAIRED OR REPLACED AT BATCA FITNESS SYSTEMS OPTION, WITHOUT PARTS CHARGE TO THE PURCHASER. ALL RETURNS REQUIRE A RETURN AUTHORIZATION PRIOR TO ACCEPTANCE OF REPAIR WORK. BATCA FITNESS SYSTEMS RESERVES THE RIGHT TO MAKE DESIGN CHANGES WITHOUT ANY PRIOR NOTIFICATION AND SHALL NOT BE RESPONSIBLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.


THE PURCHASER IS RESPONSIBLE FOR SHIPPING THE DEFECTIVE PART BACK TO THE FACTORY. REPAIR OR REPLACEMENT IS THE EXCLUSIVE AND SOLE REMEDY OF THE PURCHASER. LABOR CHARGES ASSOCIATED WITH PARTS CHANGEOVERS ARE NOT COVERED BY THIS WARRANTY. PROOF OF PURCHASE, SERIAL NUMBER, MODEL NUMBER AND DATE OF PURCHASE WILL BE REQUIRED ALONG WITH ALL PERTINENT INFORMATION OF THE ALLEGED DAMAGE.


THIS WARRANTY APPLIES ONLY TO THE ORIGINAL PURCHASER AND IS NOT TRANSFERABLE. CLAIMS UNDER THIS WARRANTY MUST BE MADE DIRECTLY TO BATCA FITNESS SYSTEMS.

BATCA FITNESS SYSTEMS
1207 N. NEW HOPE ROAD
RALEIGH, NC 27610
(919) 255-1233

WWW.BATCAFITNESS.COM

PLEASE KEEP THIS FOR YOUR RECORDS.

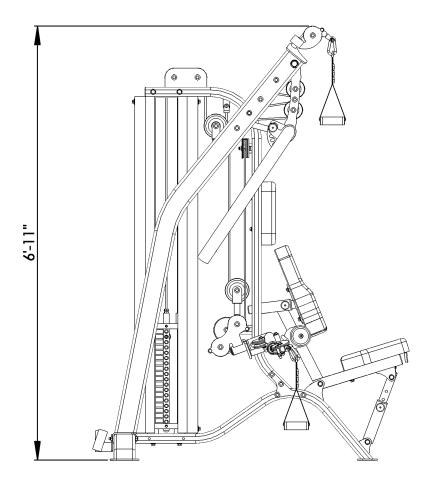

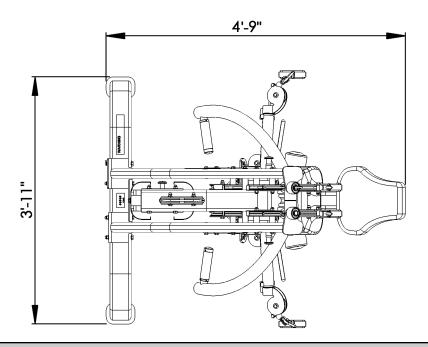

LAYOUT DIAGRAM

THE FUSION WITH LEG PRESS HAS A LAYOUT DIMENSION OF 3'-11" (WIDTH) \times 4'-9" (LENGTH) \times 6'-11" (HEIGHT). THERE SHOULD BE A MINIMUM OF 18", PREFERABLY 24", OF WORKING SPACE AROUND THE ENTIRE UNIT.