

Revision 1

January 2006



BATCA
fitness systems · usa

S-3

Mid Row

Owner's Manual



Record Serial Number Here

Date of Purchase

Batca Fitness Systems
Tel. (919) 255-1233
www.batcafitness.com

Instructions

Congratulations on the purchase of your new Batca S-3. This gym will provide you with a lifetime of enjoyment to meet your strength training needs. Batca Fitness Systems strives to build the best quality gyms and to package these gyms in such a way to avoid any damage during shipping.

In order to get started with your assembly you should first familiarize yourself with this manual. It is recommended that you read through each step thoroughly before you begin. Begin by opening your boxes and separating all of your parts. Verify that all parts are accounted for and have no damage. When all parts are accounted for, you may begin your assembly. Some items may have been pre-assembled for your convenience. Please note that hardware quantities shown reflect total quantities for your gym and may not reflect actual quantities in each bag. Assemble your gym on a solid level surface. This will ensure the best possible performance, function, and safety for the gym and your workout.

Assemble your gym according to the step by step instructions found in this manual. Failure to do so will void your warranty and may result in personal injury. After assembly, you should check each station to ensure correct operation. If a problem arises, recheck your assembly with these instructions to verify correct assembly. If you are unable to correct a problem or have questions with your assembly please contact your authorized Batca dealer.

Warning

Batca Fitness Systems has built this gym to give you a safe, effective and enjoyable workout. However, there is a risk assumed by individuals who use this type of equipment. It is very important that all warnings and instructions are read and followed before beginning any exercise program.

It is also very important to read and follow the preventative maintenance schedule described in this manual. If any of the warning labels or stickers are worn, faded, torn, scratched or missing they should be replaced immediately.

WARNING: There is a risk assumed by individuals who use this type of equipment. To minimize risk always follow these rules.

- 1) It is essential that you consult with your physician before beginning any exercise program.
- 2) Inspect equipment before each use for loose, worn, or frayed parts (including cables, nuts and bolts). Replace parts at first signs of wear (use only genuine BATCA replacement parts). Use of equipment that is damaged, worn, frayed or not completely assembled on a solid, level surface may result in injury.
- 3) Make sure all adjustment pins are fully engaged before using equipment.
- 4) Keep all parts of the body and clothing outside the path of any moving parts of the gym. Be alert to the possibility of injury. Do not be careless.
- 5) Minors and children should not be allowed to play on or around this gym.
- 6) If you have any questions on proper use or maintenance of this gym, do not hesitate to call your local BATCA FITNESS SYSTEMS distributor or BATCA FITNESS SYSTEMS at (919) 255-1233. www.batcafitness.com

Table of Contents

| | <u>Page</u> | | <u>Page</u> |
|---------------------|-------------|------------------------------------|-------------|
| Instructions | 2 | Final Assembly and Troubleshooting | 16 |
| Parts Listing | 3 | Cable Tension and Adjustments | 17 |
| Hardware Comparison | 4-7 | Maintenance | 18 |
| Main Assembly | 8-13 | Warranty | 19 |
| Upholstery | 14 | Floor Plan Layout | 20 |
| Cable Routing | 15 | | |

Frame Components

| ITEM NO. | PART NUMBER | DESCRIPTION | QTY. |
|----------|------------------|-------------------------|------|
| 1 | BFM-10430 | Weight Plate | 19 |
| 3 | BFM-10438 | Guide Rod Pulley Holder | 1 |
| 4 | BFM-10413 | 3/4" 10lb Top Plate | 1 |
| 5 | BFM-50531 | Shroud | 1 |
| 6 | BFM-50633 | Guide Rod | 2 |
| 7 | BFM-10378 | Mid Row Top | 1 |
| 8 | BFM-10379 | Mid Row Pole | 1 |
| 10 | BFM-10323 | Mid Row Arm | 1 |
| 11 | BFM-10377 | Mid Row Base | 1 |
| 12 | BFM-10322 | Mid Row Telspar | 1 |
| 13 | BFM-10325 | Chrome Pad Adjustment | 1 |
| 14 | BFM-10153 | Chrome Pad Adjustment | 1 |
| 18 | BFM-10383 | Anti-Tip | 1 |
| 19 | BFM-10405 | Cage | 1 |
| 20 | BFM-50466 | Anti-Deflection Plate | 1 |
| 21 | BFM-50651 | Cable Guard Spacer | 1 |
| 49 | BFM-50247 | 5/8" Spacer | 2 |
| 50 | BFM-50635 | Selector Shaft | 1 |

Cables

| ITEM NO. | PART NUMBER | DESCRIPTION | QTY. |
|----------|------------------|---------------------------------------|------|
| 42 | CAB-12003 | Mid Row Lockout to Weight Stack Cable | 1 |

Tools Required

- 9/16" Wrench
- 3/4" Wrench
- 9/16" Ratchet
- Allen Wrench Set
- Tape Measure

Accessories



| ITEM NO. | PART NUMBER | DESCRIPTION | QTY. |
|----------|------------------|---------------------------|------|
| 22 | BFC-50127 | Magnetic Weight Stack Pin | 1 |

Upholstery

| ITEM NO. | PART NUMBER | DESCRIPTION | QTY. |
|----------|------------------|-------------------|------|
| 15 | BFU-10117 | Large Bottom Pad | 1 |
| 16 | BFU-10124 | Mid Row Chest Pad | 1 |











Hardware


| ITEM NO. | PART NUMBER | DESCRIPTION | QTY. |
|----------|------------------|-----------------------------|------|
| 2 | BFM-50529 | Rubber Donut | 2 |
| 9 | BFH-50171 | Side Mounted Flange Bearing | 2 |
| 17 | BFH-50255 | Rubber Foot | 4 |
| 23 | BFH-50199 | Rubber Grommet | 2 |
| 24 | BFH-50174 | 4 1/2" Pulley | 5 |
| 26 | BFH-50210 | Gas Spring | 1 |
| 27 | BFH-50146 | 3/8" Flat Washer (Black) | 48 |
| 28 | BFH-50201 | 1/2" Pulley Spacer | 4 |
| 29 | BFH-50147 | 3/8" Lock Washer (Black) | 8 |
| 30 | BFH-50157 | 3/8"-16 Nylock (Black) | 23 |
| 31 | BFH-50125 | HCS 3/8"-16 X 3" P5 | 6 |
| 32 | BFH-50130 | HCS 3/8"-16 X 4 1/4" P5 | 4 |
| 33 | BFH-50128 | HCS 3/8"-16 X 3 3/4" P5 | 3 |
| 34 | BFH-50124 | HCS 3/8"-16 X 2 3/4" P5 | 4 |
| 35 | BFH-50127 | HCS 3/8"-16 X 3 1/2" P5 | 2 |
| 36 | BFH-50121 | HCS 3/8"-16 X 2" P5 | 3 |
| 37 | BFH-50254 | HCS 3/8"-16 X 3/4" P5 | 4 |
| 38 | BFH-50122 | HCS 3/8"-16 X 2 1/4" P5 | 2 |
| 39 | BFH-50253 | Beveled Leveler | 1 |
| 40 | BFH-50149 | 3/8"-16 Jam Nut (Zinc) | 1 |
| 41 | BFH-50119 | HCS 3/8"-16 X 1 1/4" P5 | 4 |
| 43 | BFH-50250 | 1 1/4" Shoulder Bolt | 1 |
| 44 | BFH-50267 | 5/16"-18 Nylock (Black) | 1 |
| 51 | BFH-50227 | Cable Strap | 1 |

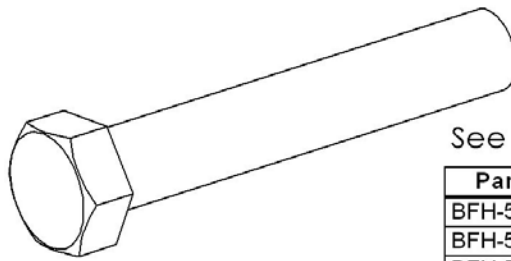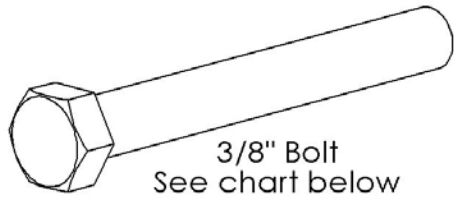


| Part # | Size |
|-----------|---------------|
| BFH-50254 | 3/8" x 3/4" |
| BFH-50118 | 3/8" x 1" |
| BFH-50119 | 3/8" x 1 1/4" |
| BFH-50120 | 3/8" x 1 1/2" |
| BFH-50285 | 3/8" x 1 3/4" |
| BFH-50121 | 3/8" x 2" |
| BFH-50122 | 3/8" x 2 1/4" |
| BFH-50123 | 3/8" x 2 1/2" |
| BFH-50124 | 3/8" x 2 3/4" |
| BFH-50125 | 3/8" x 3" |
| BFH-50126 | 3/8" x 3 1/4" |
| BFH-50127 | 3/8" x 3 1/2" |
| BFH-50128 | 3/8" x 3 3/4" |
| BFH-50129 | 3/8" x 4" |
| BFH-50130 | 3/8" x 4 1/4" |
| BFH-50131 | 3/8" x 4 1/2" |
| BFH-50274 | 3/8" x 4 3/4" |
| BFH-50279 | 3/8" x 5" |
| BFH-50270 | 3/8" x 5 1/4" |
| BFH-50132 | 3/8" x 5 1/2" |
| BFH-50133 | 3/8" x 6 1/2" |
| BFH-50298 | 3/8" x 8 3/4" |
| BFH-50134 | 3/8" x 9" |

| Part # | Size |
|-----------|---------------|
| BFH-50135 | 1/2" x 2 3/4" |
| BFH-50136 | 1/2" x 3" |
| BFH-50137 | 1/2" x 3 1/4" |
| BFH-50138 | 1/2" x 3 1/2" |
| BFH-50139 | 1/2" x 4 1/4" |
| BFH-50140 | 1/2" x 4 1/2" |
| BFH-50141 | 1/2" x 5 1/2" |

 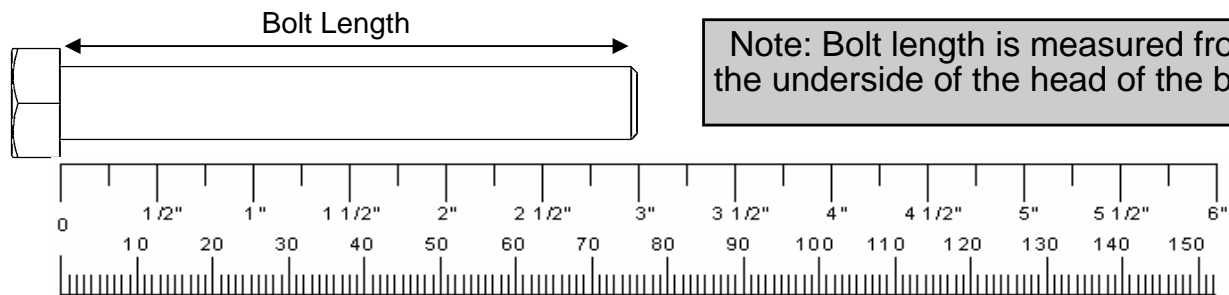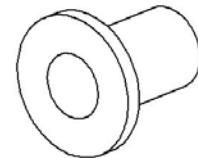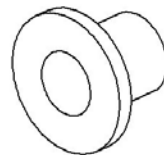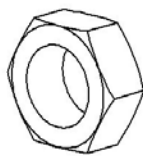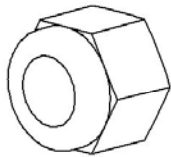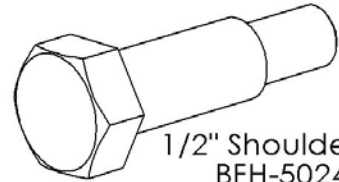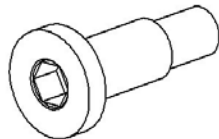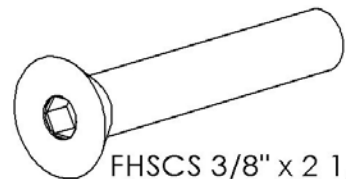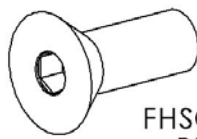


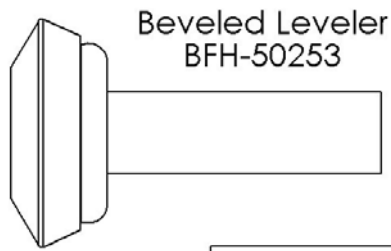


Beveled Level
BFH-50253

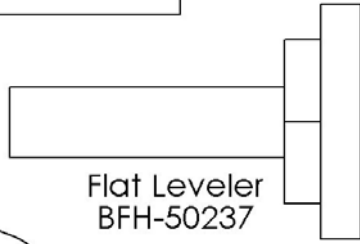

Flat Level
BFH-50237

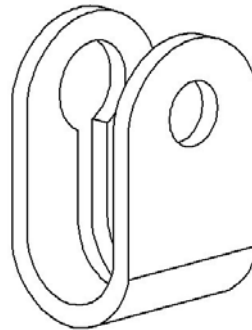


Cable Strap
BFH-50227

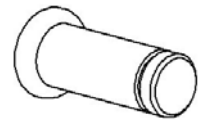


Pin
BFH-50238




Snap Ring
BFH-50239

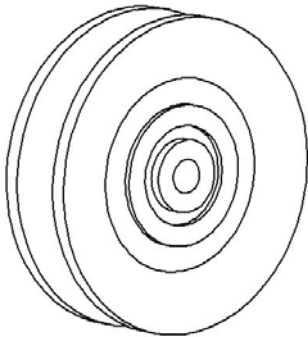


3 1/2" Pulley
BFH-50173

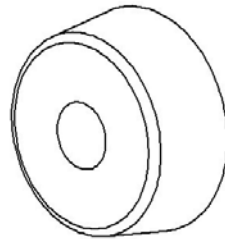


Rubber Donut
BFH-50190

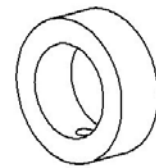

Threaded Collar
BFH-50220

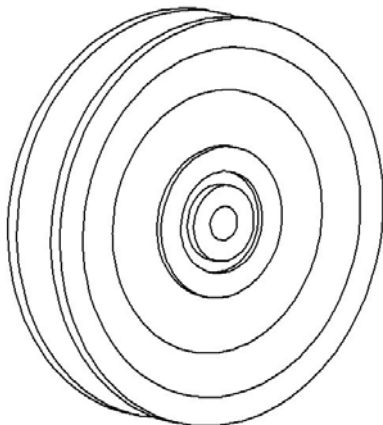


4 1/2" Pulley
BFH-50174

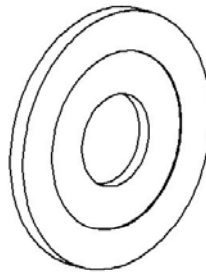


3" Plastic Washer
BFH-50221




Plastic Collar
BFH-252

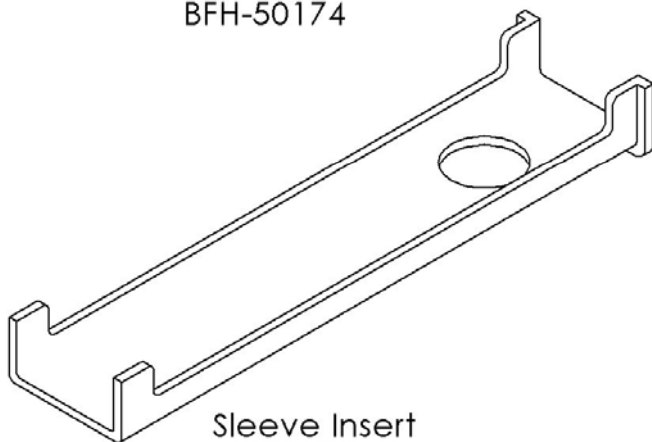


Sleeve Insert
BFH-50175

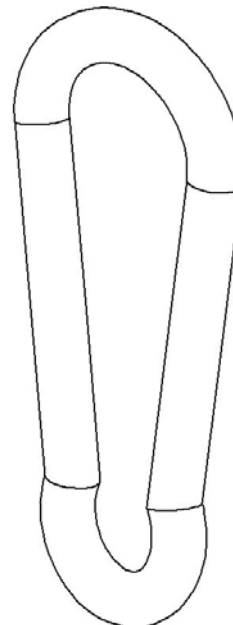


Snap Hook
BFH-50188

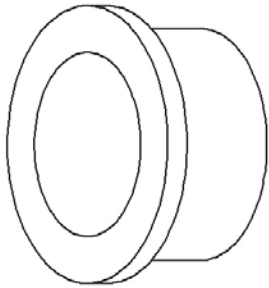


1" Bronze Bushing
BFH-50101

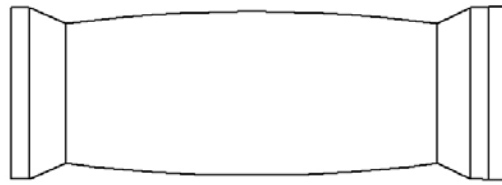


Molded Grip - BFH-50110

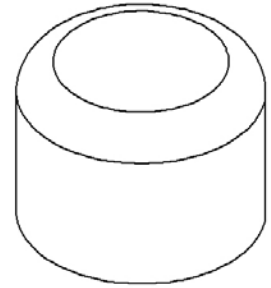

1" Outer Plastic Cap
BFH-50111

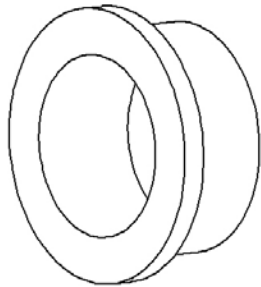



1" Bronze Bushing x 1/2 L
BFH-50297

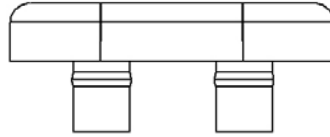


BFH-50222

Rubber Bumpers


BFH-50200

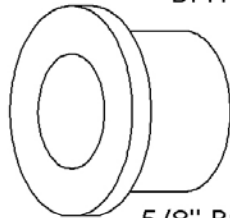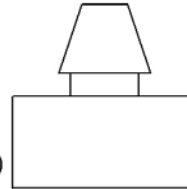


5/8" Bronze Bushing
BFH-50102

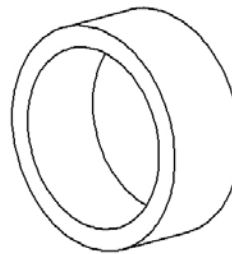


5/8" Spacer
BFM-50247

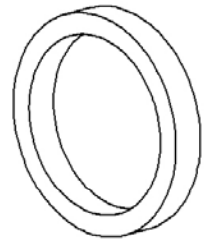

3/16" Spacer
BFM-50246

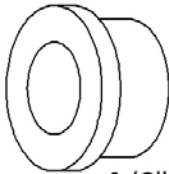


1/2" Bronze Bushing
BFH-50103

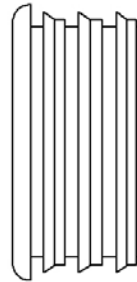

1 1/2" Inner Plastic Cap
BFH-50114




Cable Pivot Bushing
BFH-50248

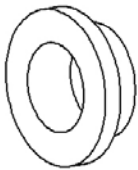


Short 1/2" Bushing
BFH-50244


1" Inner Plastic Cap
BFH-50280

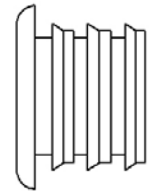


1/2" Snap Ring
BFH-50166

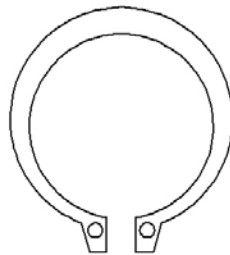


1" Snap Ring
BFH-50165

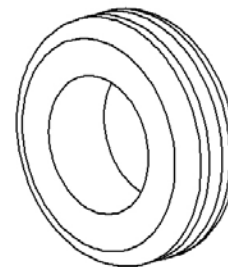


Rubber Grommet
BFH-50199

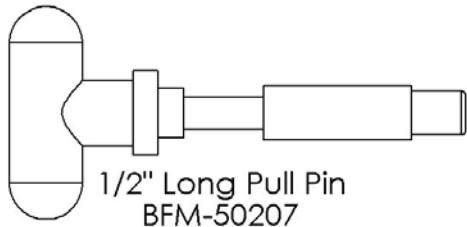

1/2" Long Pull Pin
BFM-50207

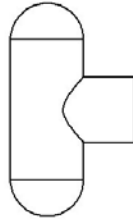


Pull Pin T-Handle
BFM-50263

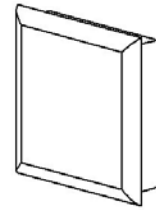


Plastic Cap


| Part # | Size |
|-----------|-----------------|
| BFH-50211 | 2" x 2" |
| BFH-50212 | 2" x 3" |
| BFH-50213 | 1 1/2" x 2" |
| BFH-50214 | 1 3/4" x 1 3/4" |
| BFH-50215 | 1 1/2" x 1 1/2" |

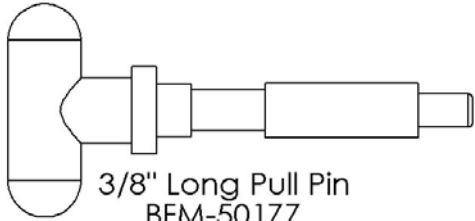


3/8" Long Pull Pin
BFM-50177

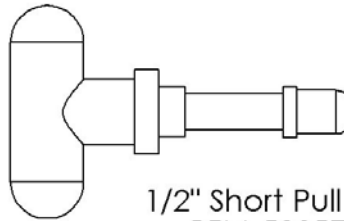

1/2" Short Pull Pin
BFM-50157

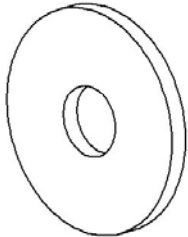


3/8" Fender Washer
BFH-50242

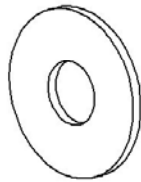


3/8" Flat Washer
BFH-50146



1/2" Flat Washer
BFH-50251

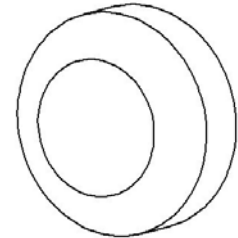


Screw Cap Cover
BFH-50112

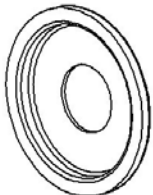


Screw Cap Washer
BFH-50113




3/8" Lock Washer
BFH-50147

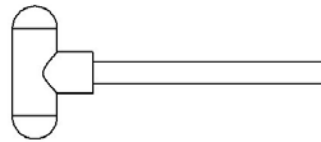

Weight Stack Pin
BFC-50127

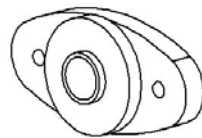


Side Mounted
Flange Bearing
BFH-50171

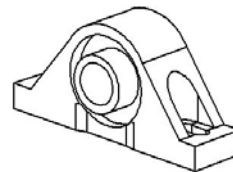

Pillow Block Bearing
BFH-50172

Items not shown.

| Part # | Description |
|-----------|-----------------------|
| BFH-50259 | Midnight Black Paint |
| BFH-50278 | Silver Metallic Paint |
| BFH-50198 | Large Logo |
| BFH-50197 | Small Logo |
| BFH-50236 | Foam Grip |
| BFH-50246 | Anti Skid |
| BFH-50262 | Silicon Gel Pack |
| BFC-10101 | 1 inch chain |
| BFC-10102 | 12 inch chain |

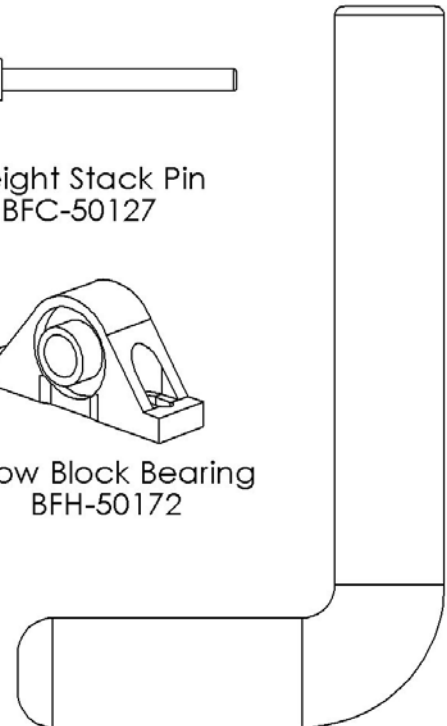

Bar Catch Rubber Sleeve
BFH-50240



PLEASE FOLLOW ALL DIRECTIONS VERY CAREFULLY FOR PROPER INSTALLATION.

Step 1:



Note: For a more consistent appearance, position all bolts in the direction shown in each figure.

- All Flat Washers and Nylocks are 3/8" unless otherwise noted.

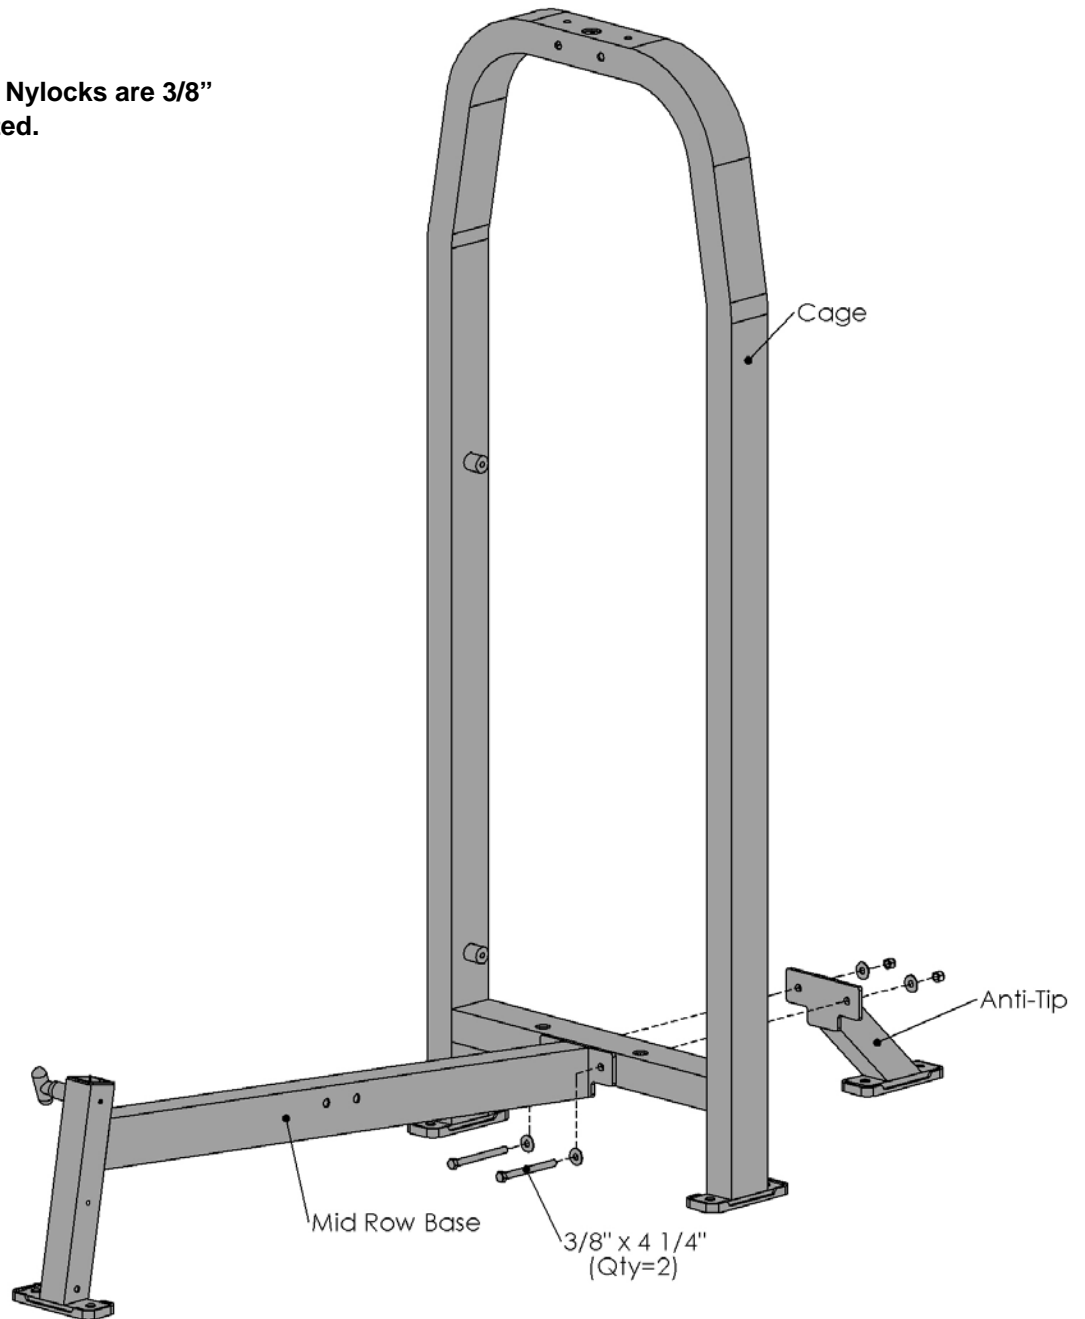


Figure 1

| Item # | Part # | Description | Qty |
|--------|-----------|--------------------------|-----|
| 11 | BFM-10377 | Mid Row Base | 1 |
| 18 | BFM-10383 | Anti-Tip | 1 |
| 19 | BFM-10405 | Cage | 1 |
| 27 | BFH-50146 | 3/8" Flat Washer (Black) | 4 |
| 30 | BFH-50157 | 3/8"-16 Nylock (Black) | 2 |
| 32 | BFH-50130 | HCS 3/8"-16 x 4 1/4" P5 | 2 |
| 17 | BFM-50255 | Rubber Foot | 4 |

Step 2:

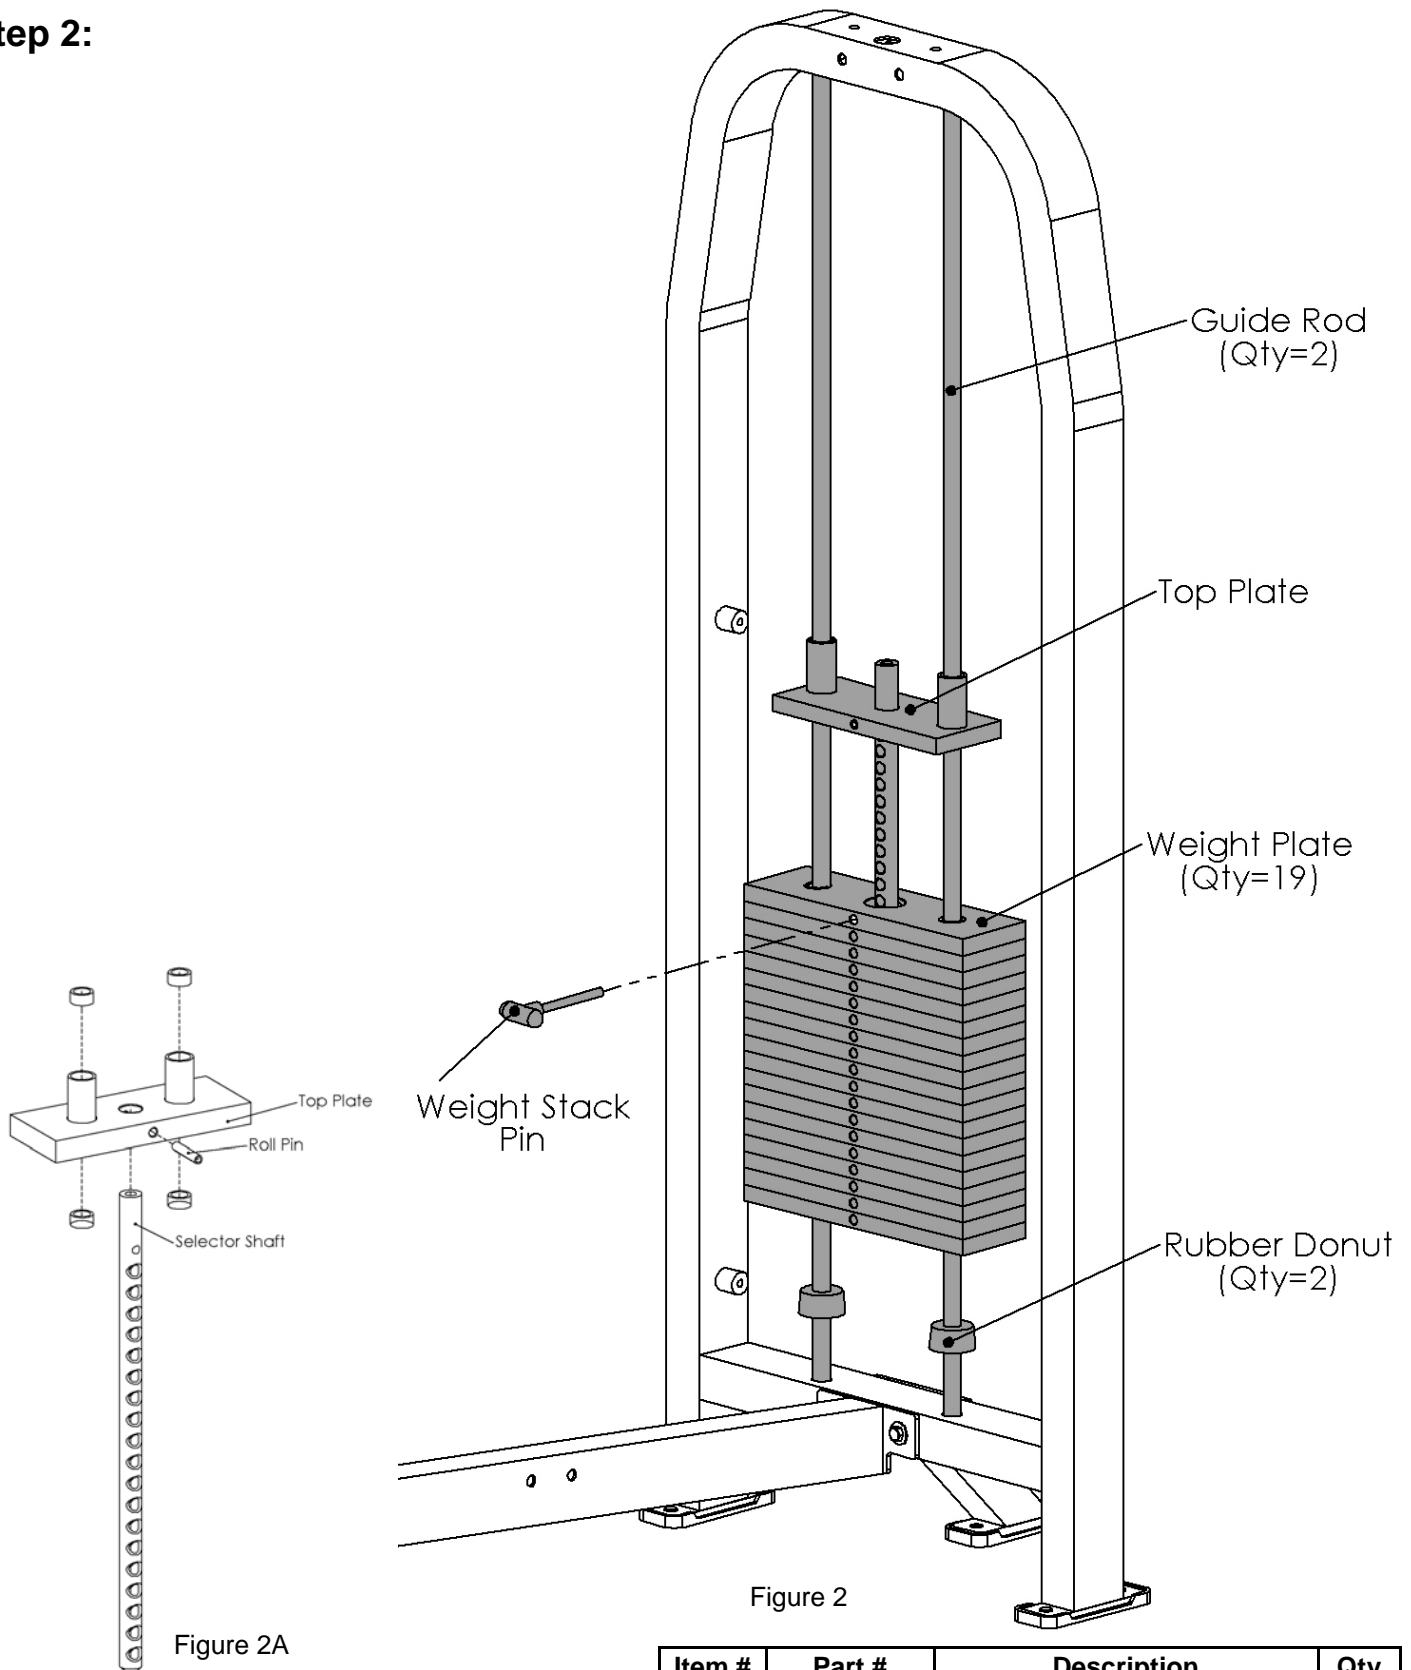


Figure 2

Figure 2A

| Item # | Part # | Description | Qty |
|--------|-----------|---------------------------|-----|
| 1 | BFM-10430 | Weight Plate | 19 |
| 2 | BFM-50529 | Rubber Donut | 2 |
| 4 | BFM-10413 | 3/4" 10lb Top Plate | 1 |
| 6 | BFM-50633 | Guide Rod | 2 |
| 22 | BFC-50127 | Magnetic Weight Stack Pin | 1 |
| 50 | BFM-50635 | Selector Shaft | 1 |

All Flat Washers and Nylocks are 3/8" unless otherwise noted.

Step 3:

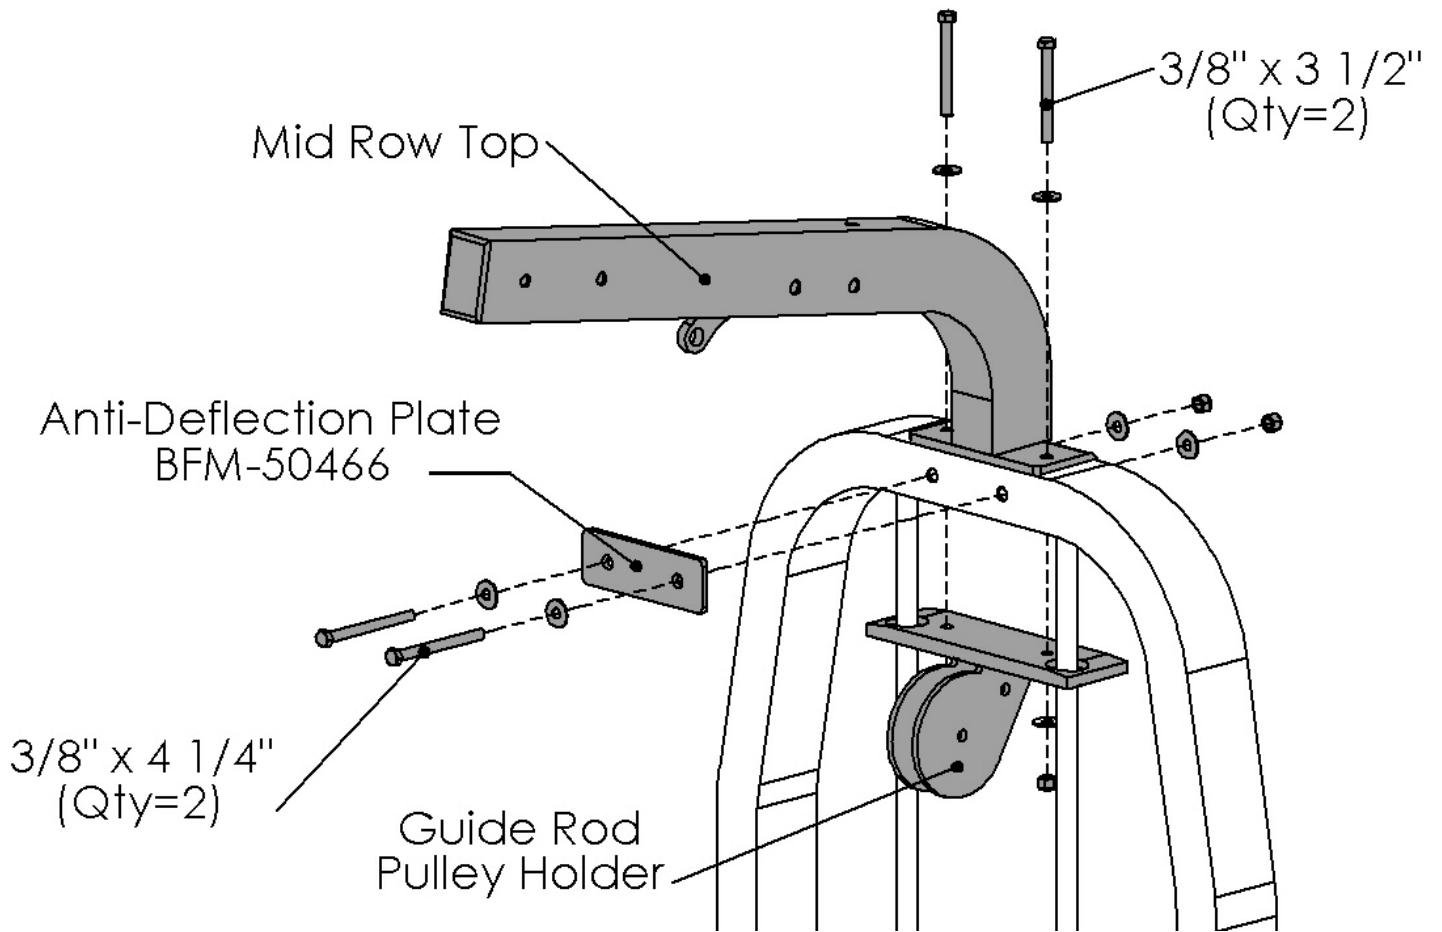


Figure 3

| Item # | Part # | Description | Qty |
|--------|-----------|--------------------------|-----|
| 3 | BFM-10438 | Guide Rod Pulley Holder | 1 |
| 7 | BFM-10378 | Mid Row Top | 1 |
| 20 | BFM-50466 | Anti-Deflection Plate | 1 |
| 27 | BFH-50146 | 3/8" Flat Washer (Black) | 8 |
| 30 | BFH-50157 | 3/8"-16 Nylock (Black) | 4 |
| 32 | BFH-50130 | HCS 3/8"-16 x 4 1/4" P5 | 2 |
| 35 | BFH-50127 | HCS 3/8"-16 x 3 1/2" P5 | 2 |

All Flat Washers and Nylocks are 3/8" unless otherwise noted.

Step 4:

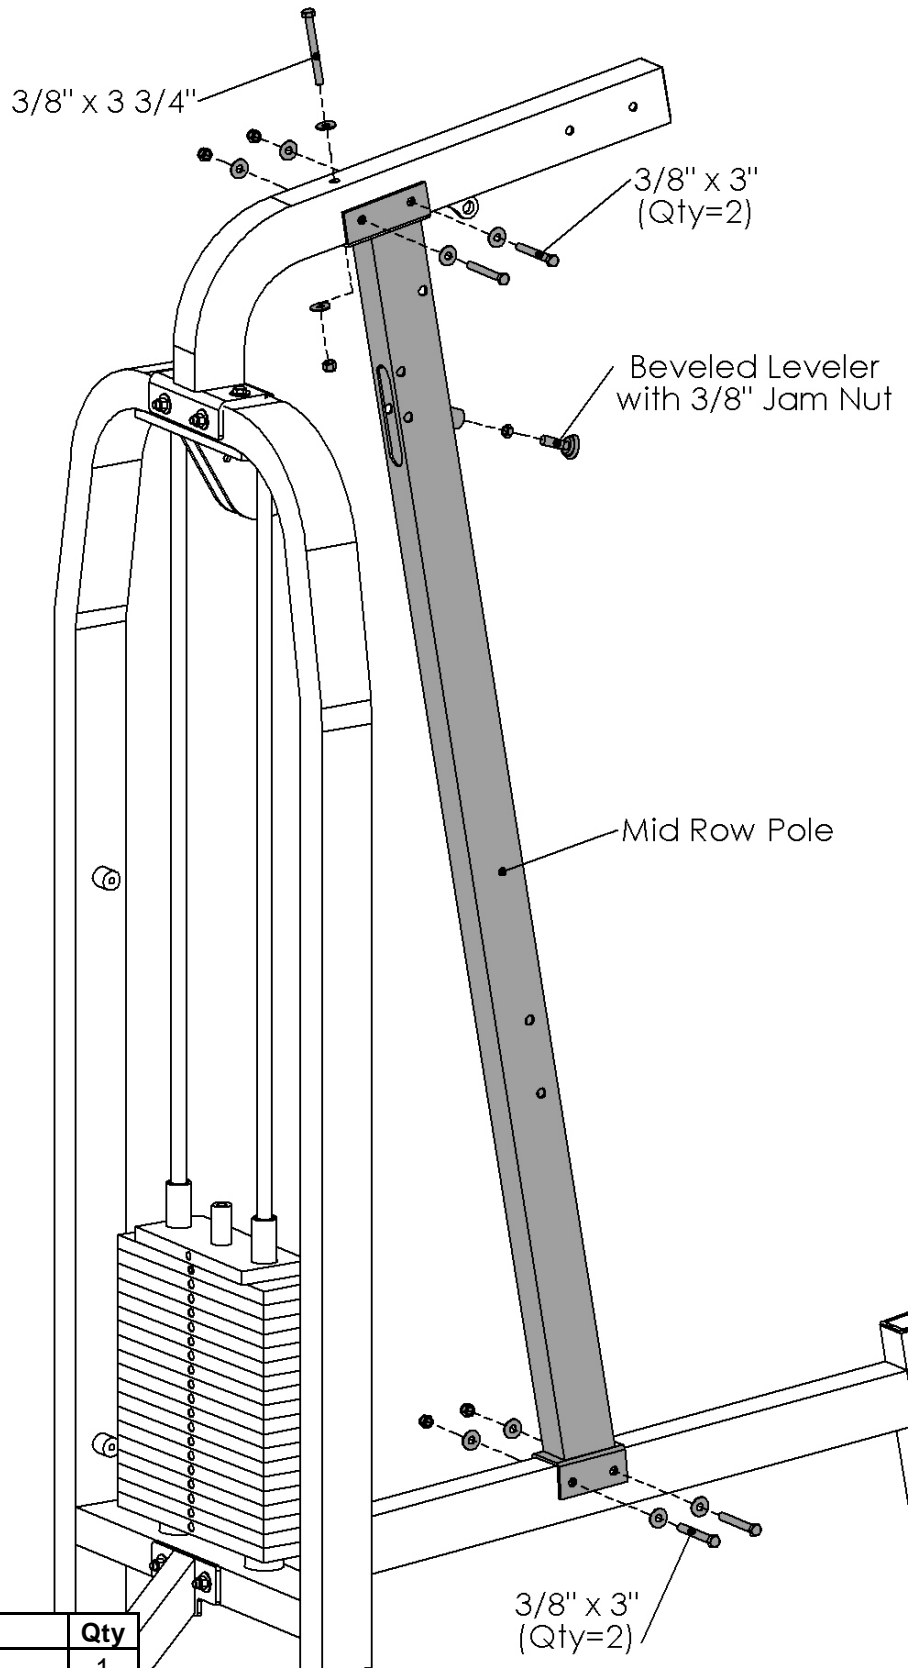


Figure 4

| Item # | Part # | Description | Qty |
|--------|-----------|--------------------------|-----|
| 8 | BFM-10379 | Mid Row Pole | 1 |
| 27 | BFH-50146 | 3/8" Flat Washer (Black) | 10 |
| 30 | BFH-50157 | 3/8"-16 Nylock (Black) | 5 |
| 31 | BFH-50125 | HCS 3/8"-16 x 3" P5 | 4 |
| 33 | BFH-50128 | HCS 3/8"-16 x 3 3/4" P5 | 1 |
| 39 | BFH-50253 | Beveled Leveler | 1 |
| 40 | BFH-50139 | 3/8"-16 Jam Nut (Zinc) | 1 |

All Flat Washers and Nylocks are 3/8" unless otherwise noted.

Step 5:

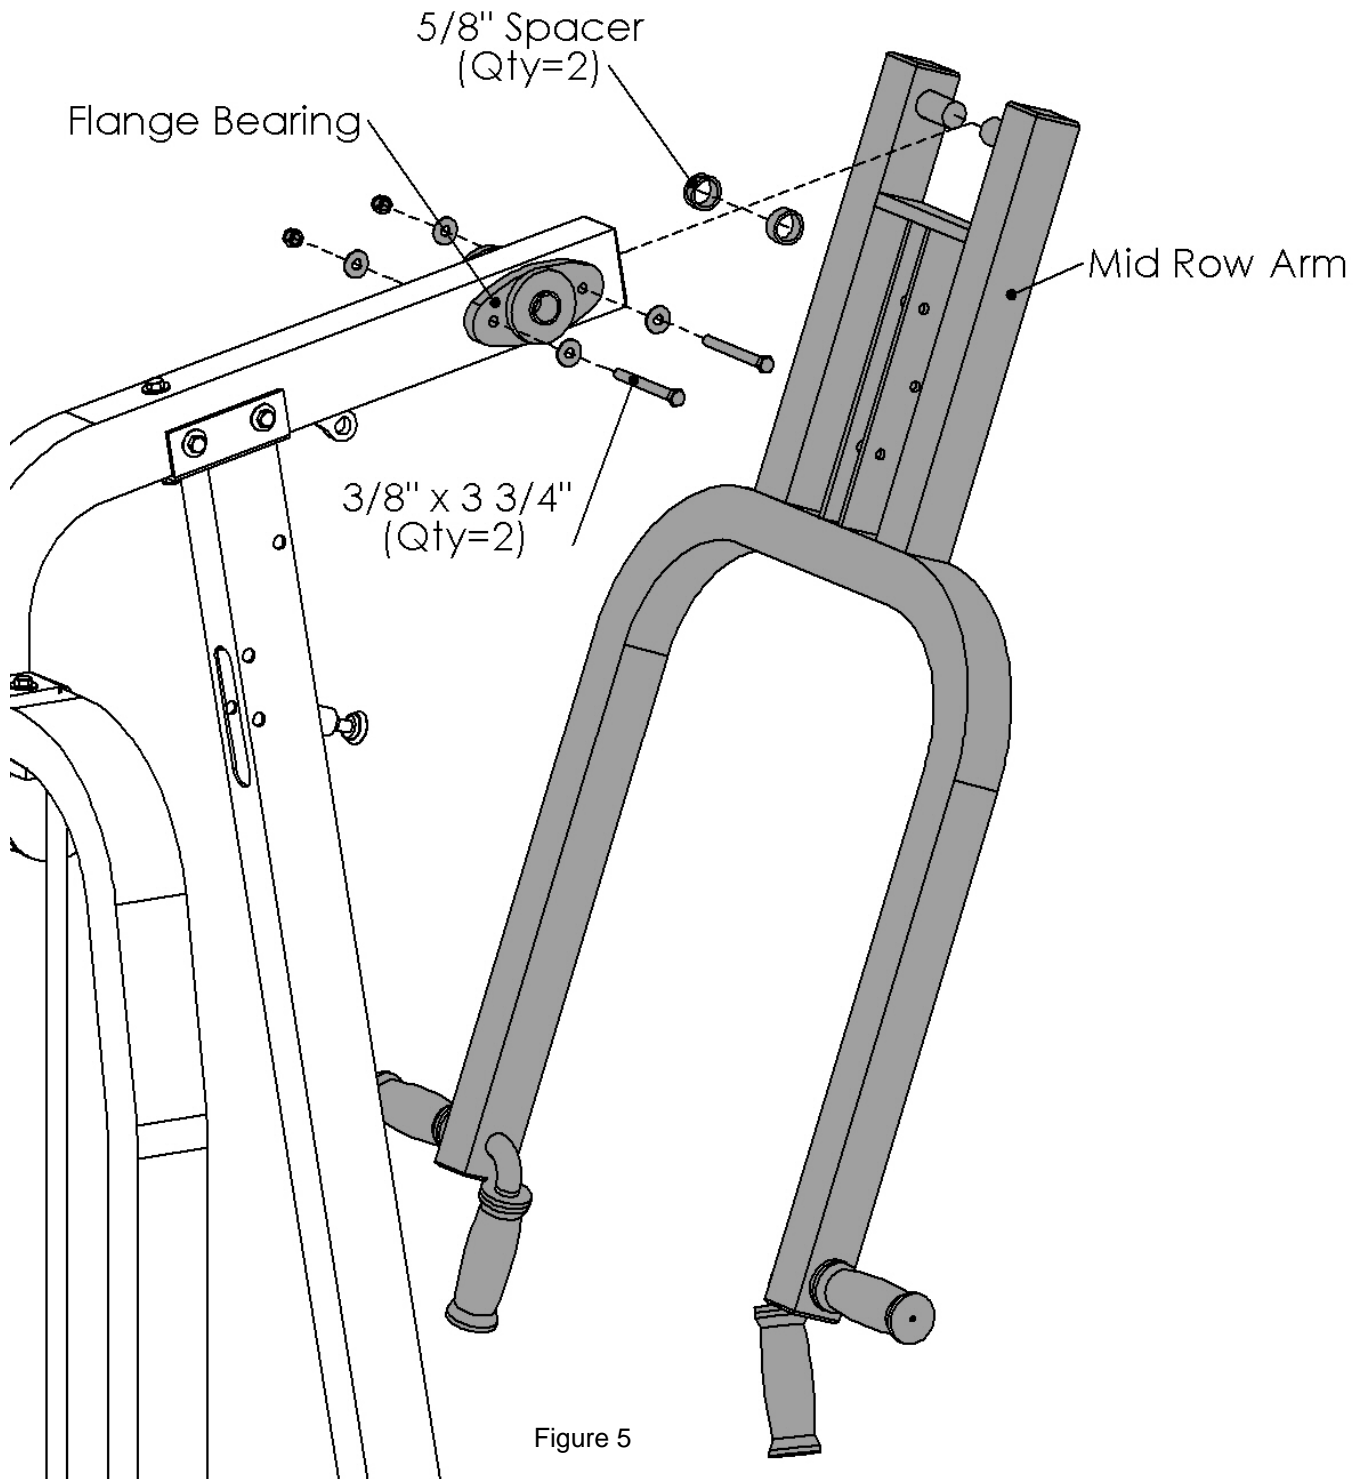


Figure 5

Note: All bolts in this step receive one 3/8" Flat Washer and one 3/8" Lock Washer instead of one 3/8" Nylock.

All Flat Washers and Nylocks are 3/8" unless otherwise

| Item # | Part # | Description | Qty |
|--------|-----------|-----------------------------|-----|
| 9 | BFH-50171 | Side Mounted Flange Bearing | 2 |
| 10 | BFM-10323 | Mid Row Arm | 1 |
| 27 | BFH-50146 | 3/8" Flat Washer (Black) | 4 |
| 30 | BFH-50157 | 3/8"-16 Nylock (Black) | 2 |
| 33 | BFH-50128 | HCS 3/8"-16 x 3 3/4" P5 | 2 |
| 49 | BFM-50247 | 5/8" Spacer | 2 |

Step 6:

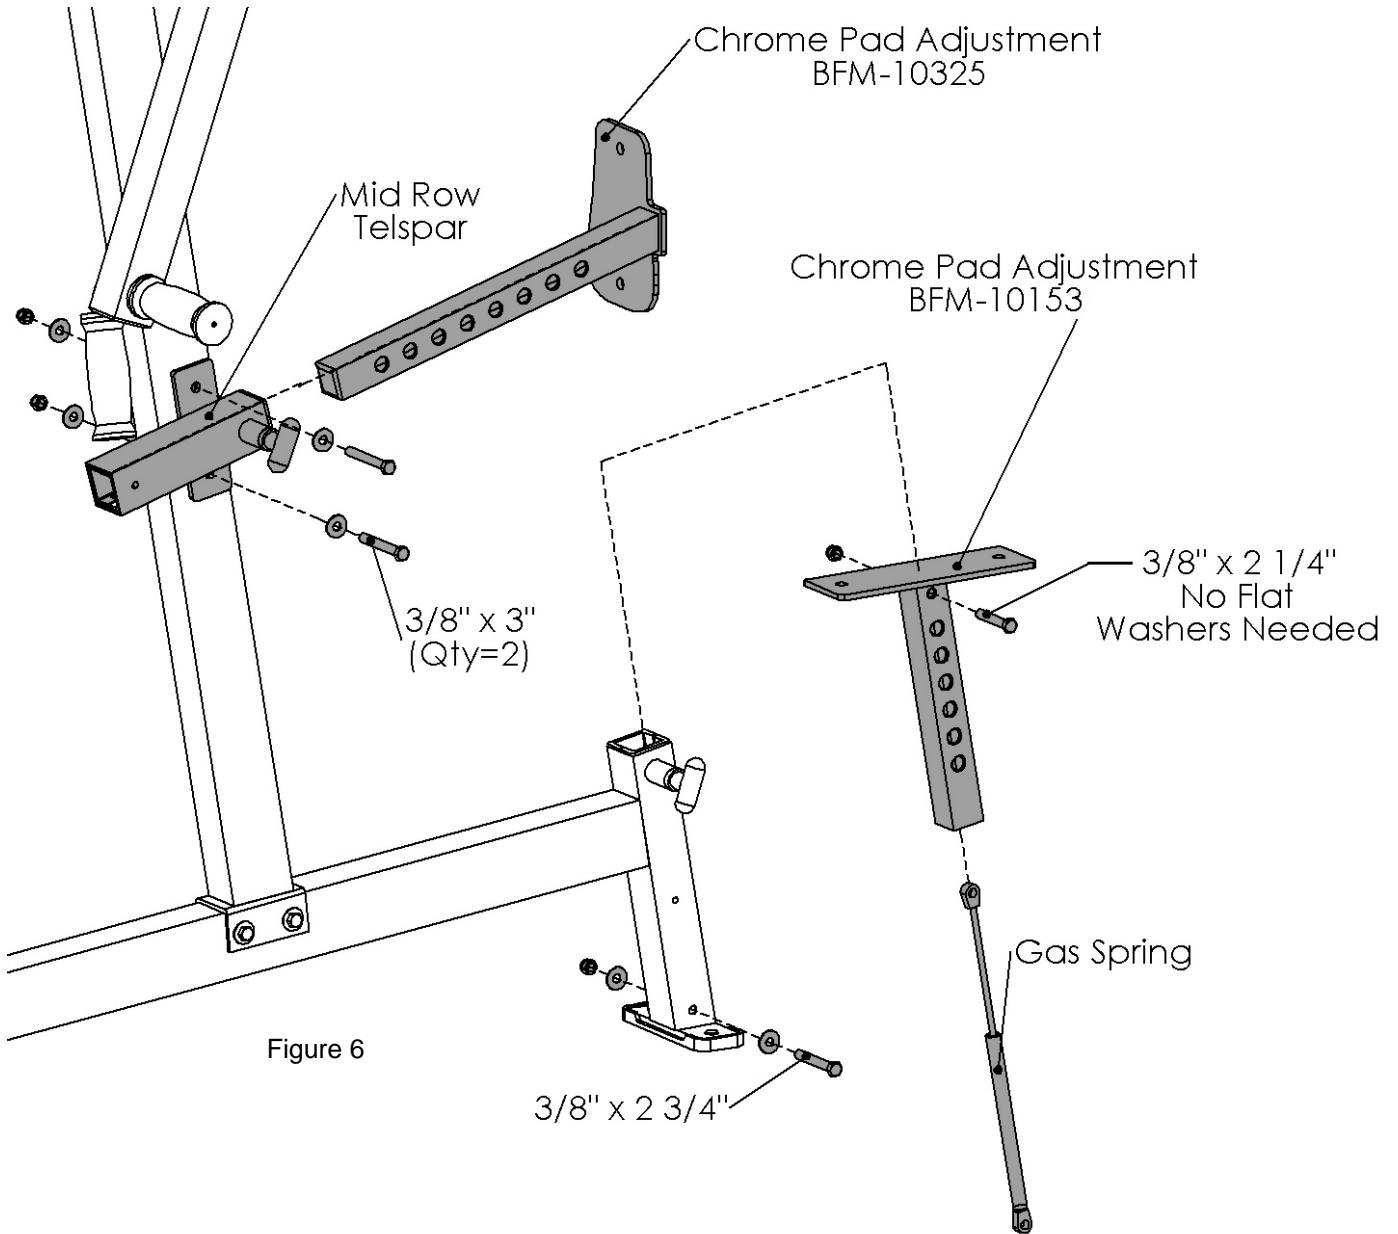


Figure 6

| Item # | Part # | Description | Qty |
|--------|-----------|--------------------------|-----|
| 12 | BFM-10322 | Mid Row Telspar | 1 |
| 13 | BFM-10325 | Chrome Pad Adjustment | 1 |
| 14 | BFM-10153 | Chrome Pad Adjustment | 1 |
| 26 | BFH-50210 | Gas Spring | 1 |
| 27 | BFH-50146 | 3/8" Flat Washer (Black) | 6 |
| 30 | BFH-50157 | 3/8"-16 Nylock (Black) | 4 |
| 31 | BFH-50125 | HCS 3/8"-16 x 3" P5 | 2 |
| 34 | BFH-50124 | HCS 3/8"-16 x 2 3/4" P5 | 1 |
| 38 | BFH-50122 | HCS 3/8"-16 x 2 1/4" P5 | 1 |

All Flat Washers and Nylocks are 3/8" unless otherwise noted.

Step 7:

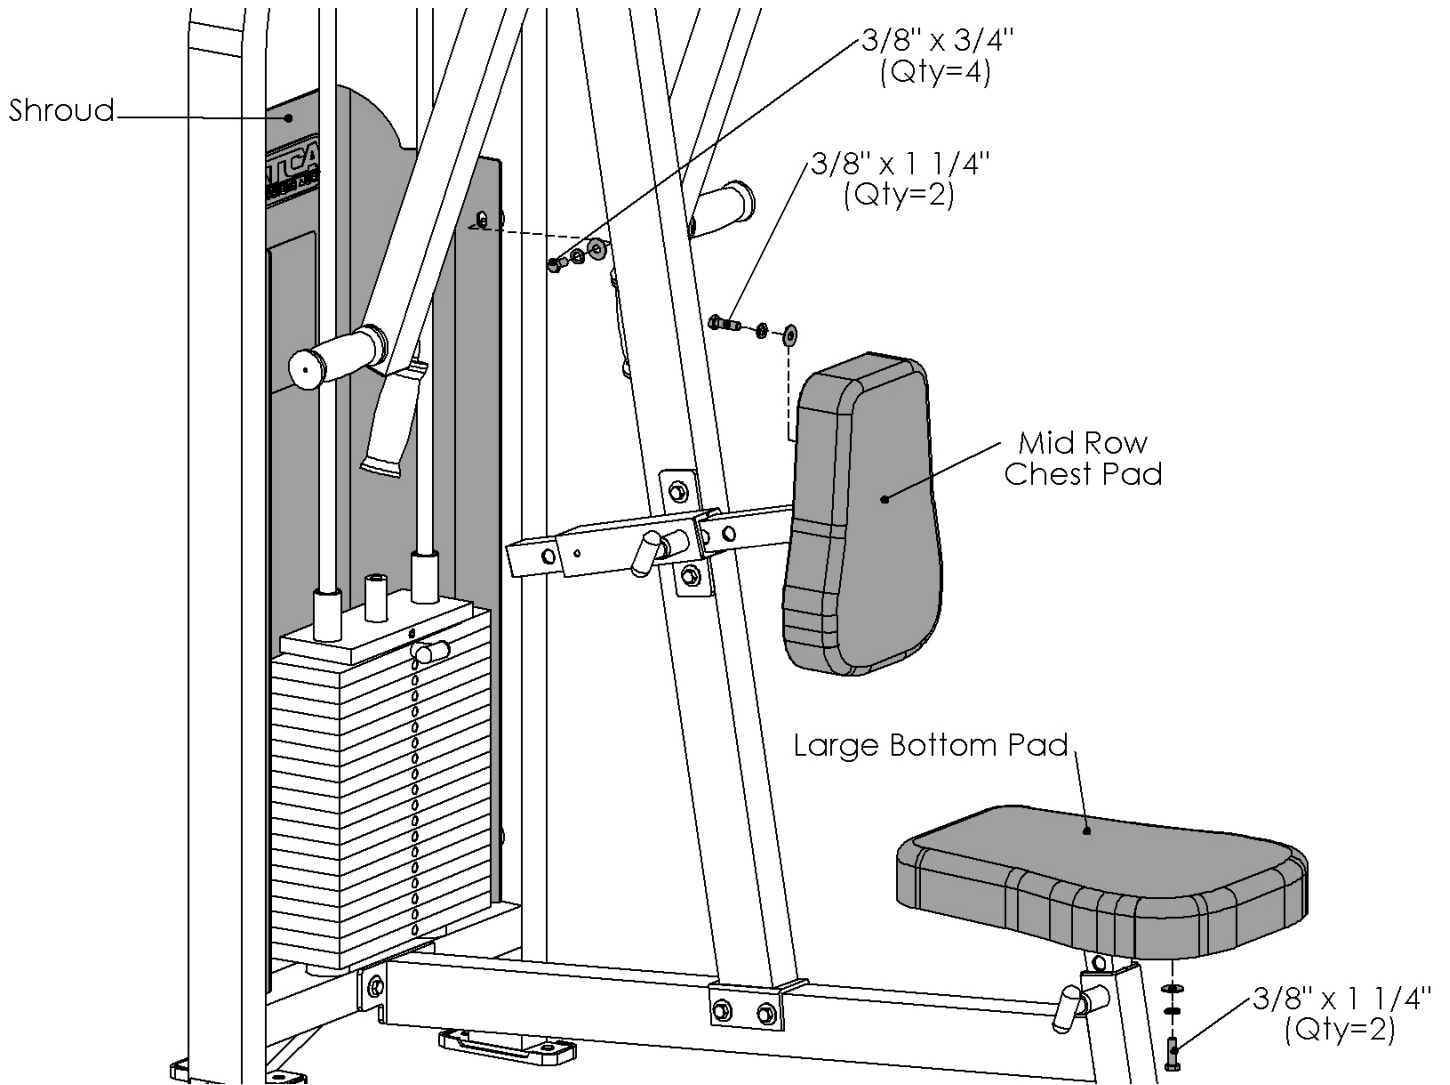


Figure 7

Note: All bolts in this step receive one 3/8" Flat Washer and one 3/8" Lock Washer instead of one 3/8" Nylock.

All Flat Washers and Nylocks are 3/8" unless otherwise

| Item # | Part # | Description | Qty |
|--------|-----------|--------------------------|-----|
| 5 | BFM-50531 | Shroud | 1 |
| 15 | BFU-10117 | Large Bottom Pad | 1 |
| 16 | BFU-10124 | Mid Row Chest Pad | 1 |
| 27 | BFH-50146 | 3/8" Flat Washer (Black) | 8 |
| 29 | BFH-50147 | 3/8" Lock Washer (Black) | 8 |
| 37 | BFH-50254 | HCS 3/8"-16 x 3/4" P5 | 4 |
| 41 | BFH-50119 | HCS 3/8"-16 x 1 1/4" P5 | 4 |

Step 8:


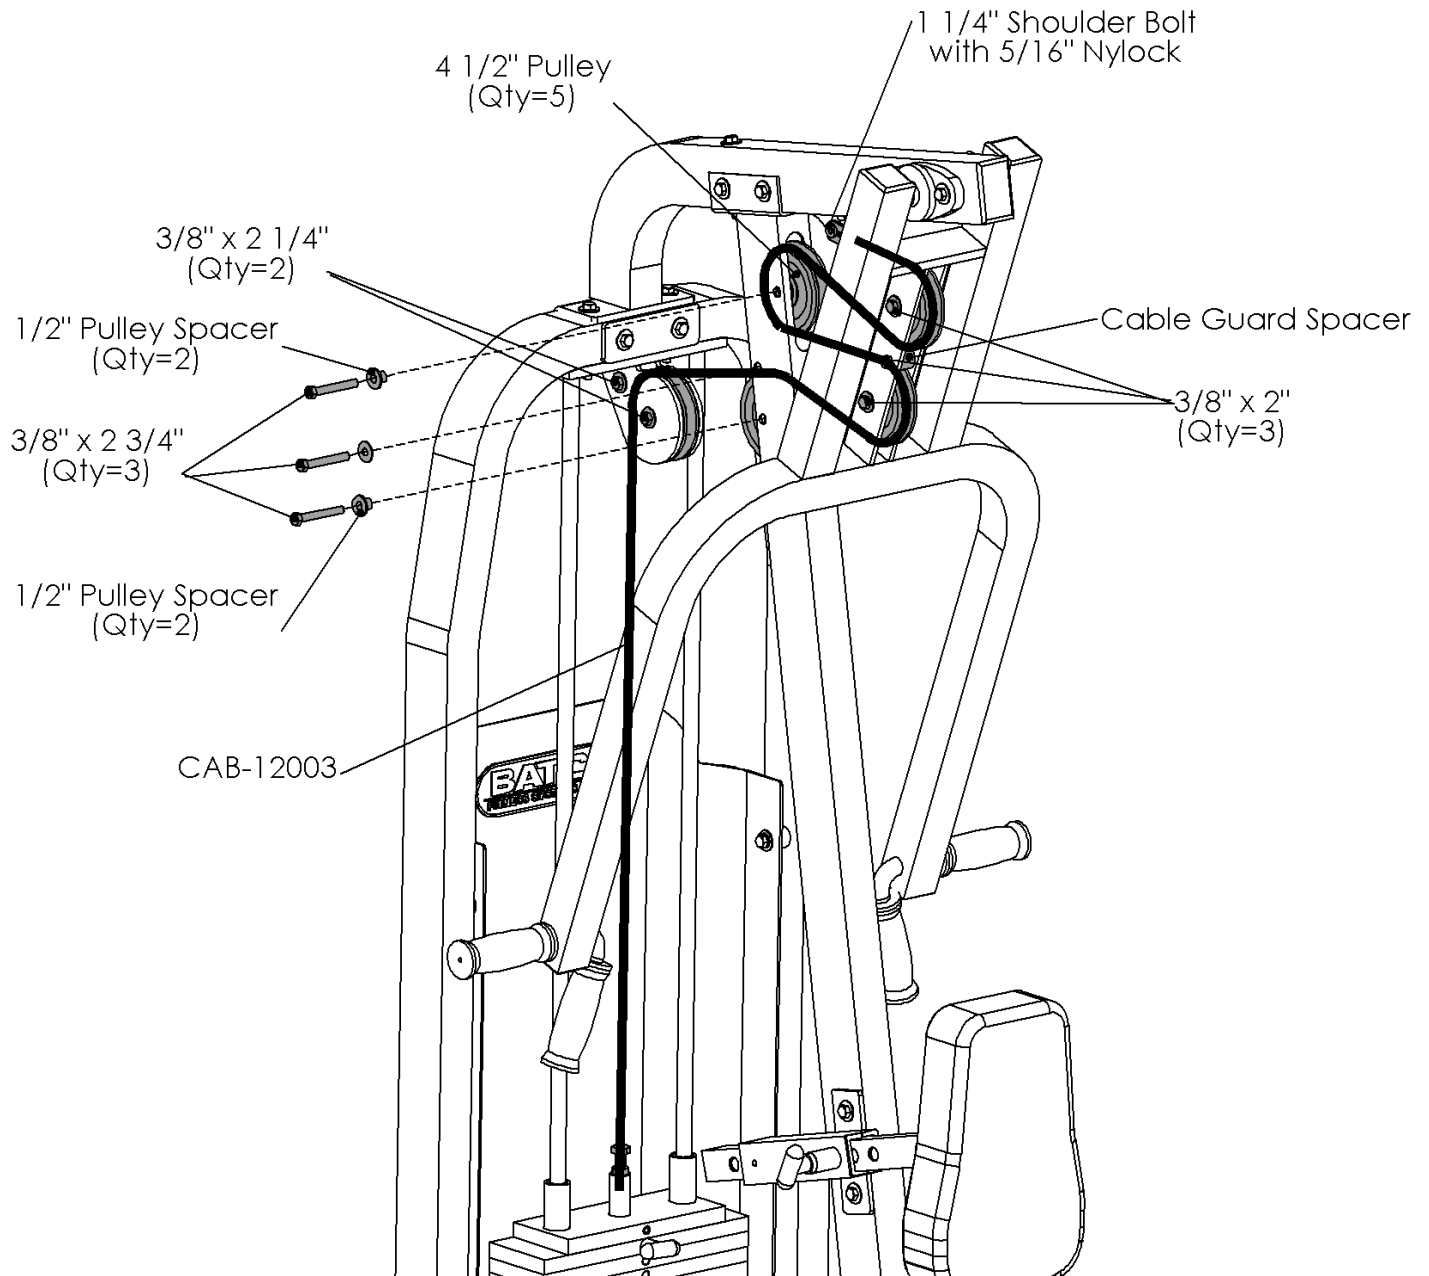


Figure 8

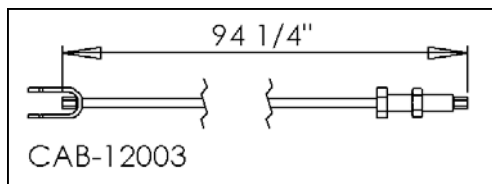


Note: Shroud was removed from drawing for clear view of cable.

| Item # | Part # | Description | Qty |
|--------|-----------|------------------------------------|-----|
| 24 | BFH-50174 | 4 1/2" Pulley | 5 |
| 27 | BFH-50146 | 3/8" Flat Washer (Black) | 12 |
| 28 | BFH-50201 | 1/2" Pulley Spacer | 4 |
| 30 | BFH-50157 | 3/8"-16 Nylock (Black) | 8 |
| 34 | BFH-50124 | HCS 3/8"-16 x 2 3/4" P5 | 3 |
| 36 | BFH-50121 | HCS 3/8"-16 x 2" P5 | 3 |
| 38 | BFH-50122 | HCS 3/8"-16 x 2 1/4" P5 | 2 |
| 42 | CAB-12003 | Mid Row Lockout to Wt. Stack Cable | 1 |
| 43 | BFH-50250 | 1 1/4" Shoulder Bolt | 1 |
| 44 | BFH-50267 | 5/16" Nylock (Black) | 1 |
| 51 | BFH-50227 | Cable Strap | 1 |


All Flat Washers and Nylocks are 3/8" unless otherwise noted.

Final Assembly and Troubleshooting

Weight Stack Decals:

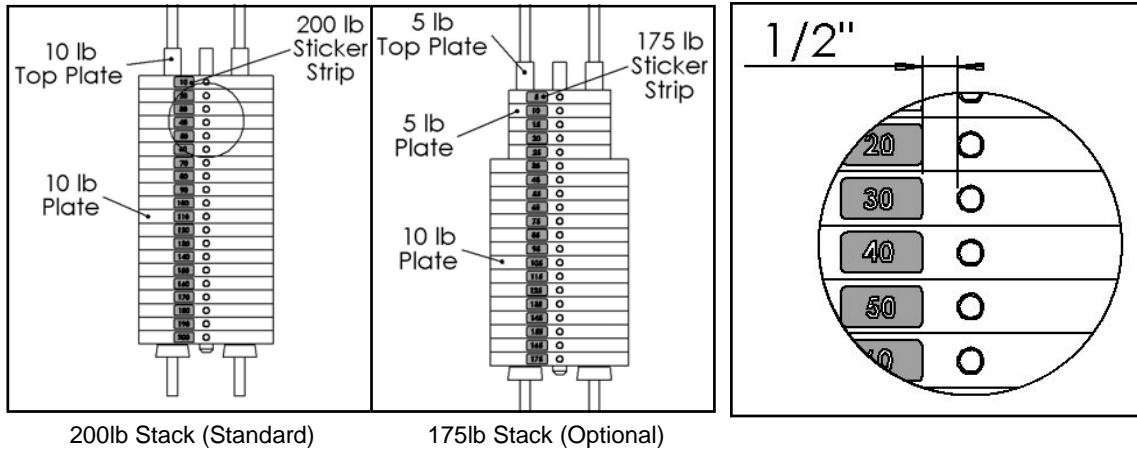


IMPORTANT - Check These Components Before Using Gym:

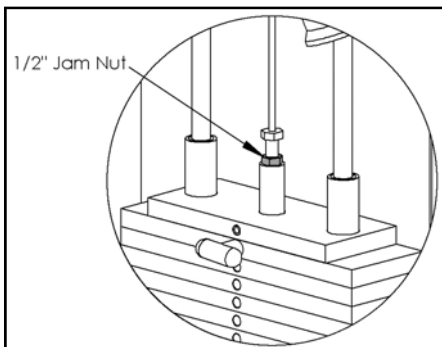


Top Plate

- Each Cable with a threaded bolt on either end **must be threaded at least $1/2''$** into its attachment, whether it be a Free Floater, Lockout Free Floater, or the Top Plate of the weight stack. Each must also be secured with a $1/2''$ Jam Nut to ensure a safe and proper connection.

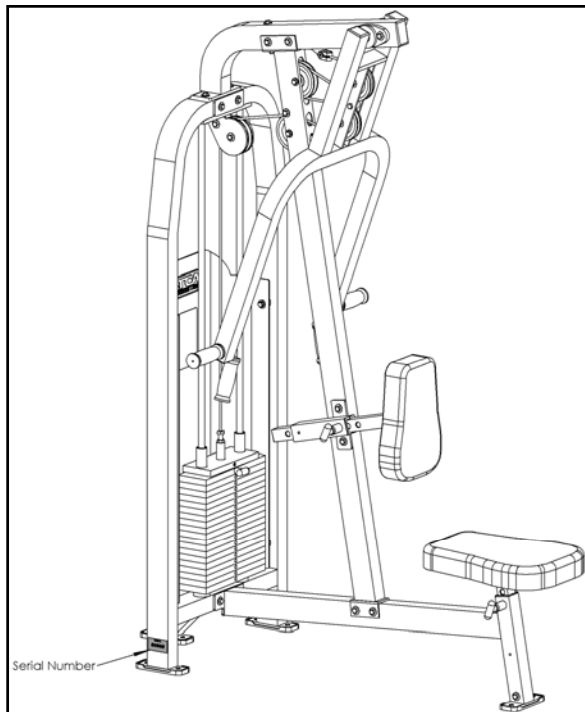

- **Wrench Tighten** the two set screws on all Flange Bearings with an Allen Wrench.

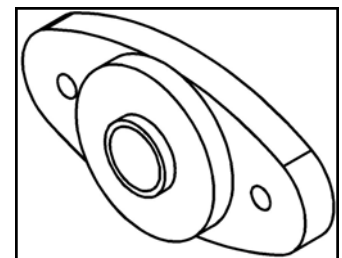

Side Mounted Flange Bearing BFH-50171

- **Record** your serial number on the front of this manual and keep for your records. The serial number can be found on the side of the cage as seen in the figure to the left..


Cable Adjustments

- **Adjust** cable to proper tension from the location shown below.



Note: All cables with threaded adjustable ends must have at least 1/2" of the threads threaded in to its counterpart. It is very important that the 1/2" Jam Nut be wrench tightened to the counterpart to ensure that the threaded adjustable end of the cable does not back out of its counterpart.

- **Note:** If the top plate raises off of the second plate in the weight stack, then the cable tension is too tight. You will need to take some of the tension out to lower the Top plate flush with the second plate.

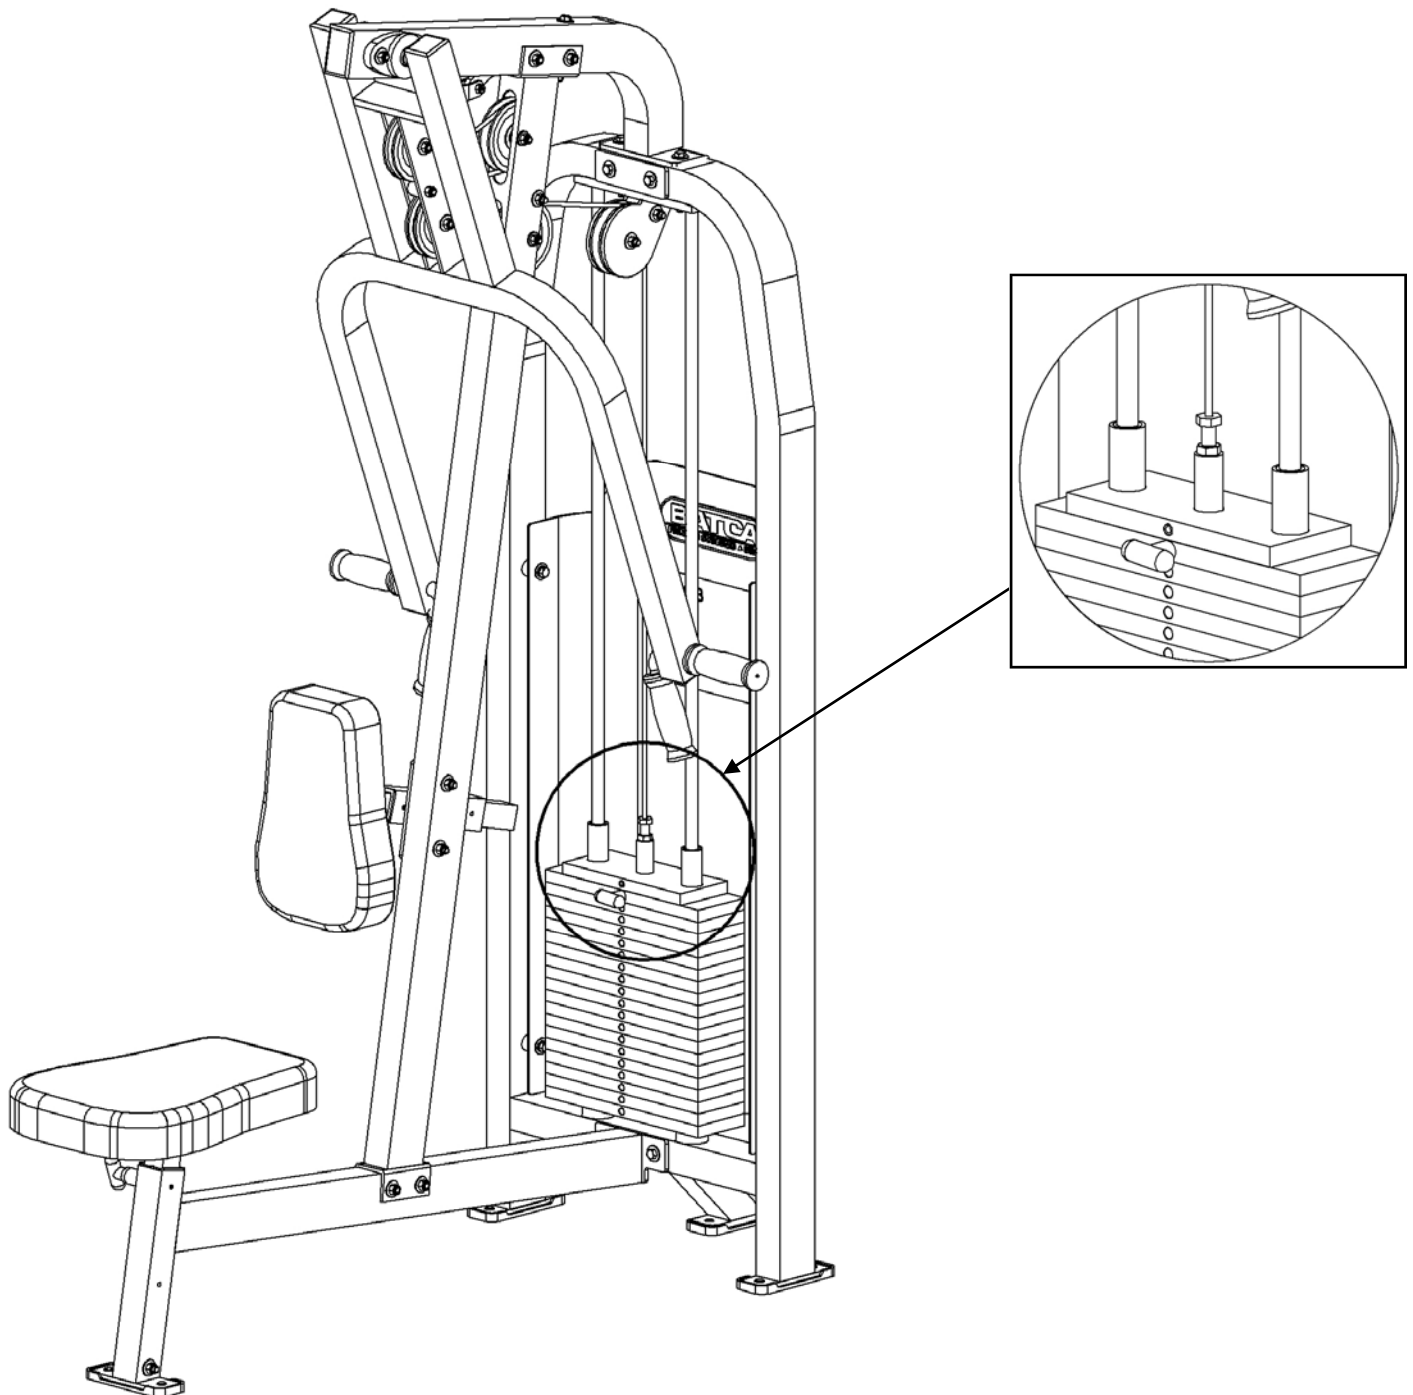

Preventive Maintenance

Batca Fitness Systems strives to give you the very best in quality, performance and safety through carefully engineered designs and excellent workmanship. In order to maintain this high level of quality the preventative maintenance schedule below should be followed.

Clean upholstery, grips, and roller pads with mild soap and water generally after every use. The guide rods, chrome slides and frame should be cleaned with a cotton cloth. Upon cleaning the guide rods, a thin layer of Silicone or Teflon gel should be applied to each rod to ensure a glass smooth performance.

An overall inspection should be done before each workout. If the warning and safety decals are worn or have been removed they should be replaced immediately. The cables and cable systems should be inspected for signs of wear and proper tension. In order to check cables properly you should carefully run the cable through your fingertips, checking for signs of wear, cracks, burs and thinning spots. Replace any part at first signs of wear. Cables should be adjusted for proper tension. See assembly instructions for this detail. All hardware, stops, and adjustments should be checked and tightened as required.

The guide rods on your machine should be cleaned and lubricated regularly. This will ensure a glass smooth performance from your weight stack. A thin layer of either Silicone or Teflon gel should applied to each rod. Each pillow block bearing and flange bearing has a grease fittings that must be lubricated regularly. Use general purpose bearing grease and follow the schedule below.

Although cables should be inspected daily, it is important that ALL cables be replaced as directed in the schedule below. Please note that at any first sign of wear the cable should be replaced immediately.

If there are any questions concerning maintenance, please contact your local Batca dealer or contact Batca Fitness Systems directly at:

Batca Fitness Systems
(919) 255-1233
www.batcafitness.com

| | Daily | | Weekly | | Monthly | | Quarterly | | Years | |
|------------------|------------|------|------------|------|------------|------|------------|------|------------|------|
| | Commercial | Home | Commercial | Home | Commercial | Home | Commercial | Home | Commercial | Home |
| Clean | | | | | | | | | | |
| Upholstery | X | | | X | | | | | | |
| Hand Grips | X | | | X | | | | | | |
| Roller Pads | X | | | X | | | | | | |
| Guide Rods | | | X | | | X | | | | |
| Chrome Slides | | | X | | | X | | | | |
| Frame | | | X | | | X | | | | |
| Inspect | | | | | | | | | | |
| Overall | X | X | | | | | | | | |
| Safety Decals | X | X | | | | | | | | |
| Cables | X | X | | | | | | | | |
| Cable Tension | | | X | | | X | | | | |
| Pulleys | X | X | | | | | | | | |
| Hardware | X | X | | | | | | | | |
| Stops | X | X | | | | | | | | |
| Upholstery | X | X | | | | | | | | |
| Hand Grips | | | X | | | X | | | | |
| Frame | | | X | | | X | | | | |
| Bushings | X | | | X | | | | | | |
| Bearings | X | | | X | | | | | | |
| Lubricate | | | | | | | | | | |
| Guide Rods | | | X | | | X | | | | |
| Bearings | | | | | | | As Needed | | | 1 |
| Replace | | | | | | | | | | |
| Cables | | | | | | | | | 1 | 3 |

Limited Lifetime Warranty

What is covered

For Residential Use:

Batca Fitness Systems warrants all of its products against defects in manufacturing, materials and workmanship under normal use and service for one year from date of purchase including paint, chrome, upholstery and grips. Batca Fitness Systems also warrants all cables, belts, bolts, nuts, caps, plugs, bumpers, washers, levelers, decals, gas springs and other hardware for three years after date of purchase; all moving parts, including pulleys, bushings, bearings and pull pins for five years after date of purchase and warrants the frame and all welded parts for the lifetime of the original purchaser.

For Commercial Use:

Batca Fitness Systems warrants all of its products against defects in manufacturing, materials and workmanship under normal use and service for six months from date of purchase including paint, chrome, upholstery and grips. Batca Fitness Systems also warrants all cables, belts, bolts, nuts, caps, plugs, bumpers, washers, levelers, decals, gas springs and other hardware for one year after date of purchase; all moving parts, including pulleys, bushings, bearings and pull pins for three years after date of purchase and warrants the frame and all welded parts for ten years after date of purchase.

What is not covered

This warranty does not cover damage, which results from shipping, misuse, abuse, neglect, carelessness, modification or alteration, accident, fire, flood, "acts of God" or other contingencies beyond the control of Batca Fitness Systems. This warranty also does not cover deterioration from wear and tear or exposure or any defect, which would not have happened if instructions in the owner's manual had been followed. Improper installation, improper assembly or follow-up maintenance along with installation of parts or accessories not originally intended for products of Batca Fitness Systems are also not covered by this warranty. Only genuine Batca parts should be used for replacement, repair, and maintenance for this warranty to apply.

Defective parts will be repaired or replaced at Batca Fitness Systems option, without parts charge to the purchaser. All returns require a return authorization prior to acceptance of repair work. Batca Fitness Systems reserves the right to make design changes without any prior notification and shall not be responsible for incidental or consequential damages.


The purchaser is responsible for shipping the defective part back to the factory. Repair or replacement is the exclusive and sole remedy of the purchaser. Labor charges associated with parts changeovers are not covered by this warranty. Proof of purchase, serial number, model number and date of purchase will be required along with all pertinent information of the alleged damage.

This warranty applies only to the original purchaser and is not transferable. Claims under this warranty must be made directly to Batca Fitness Systems.

Batca Fitness Systems
1207 N. New Hope Road
Raleigh, NC 27610
(919) 255-1233

www.batcafitness.com

Please keep this for your records.

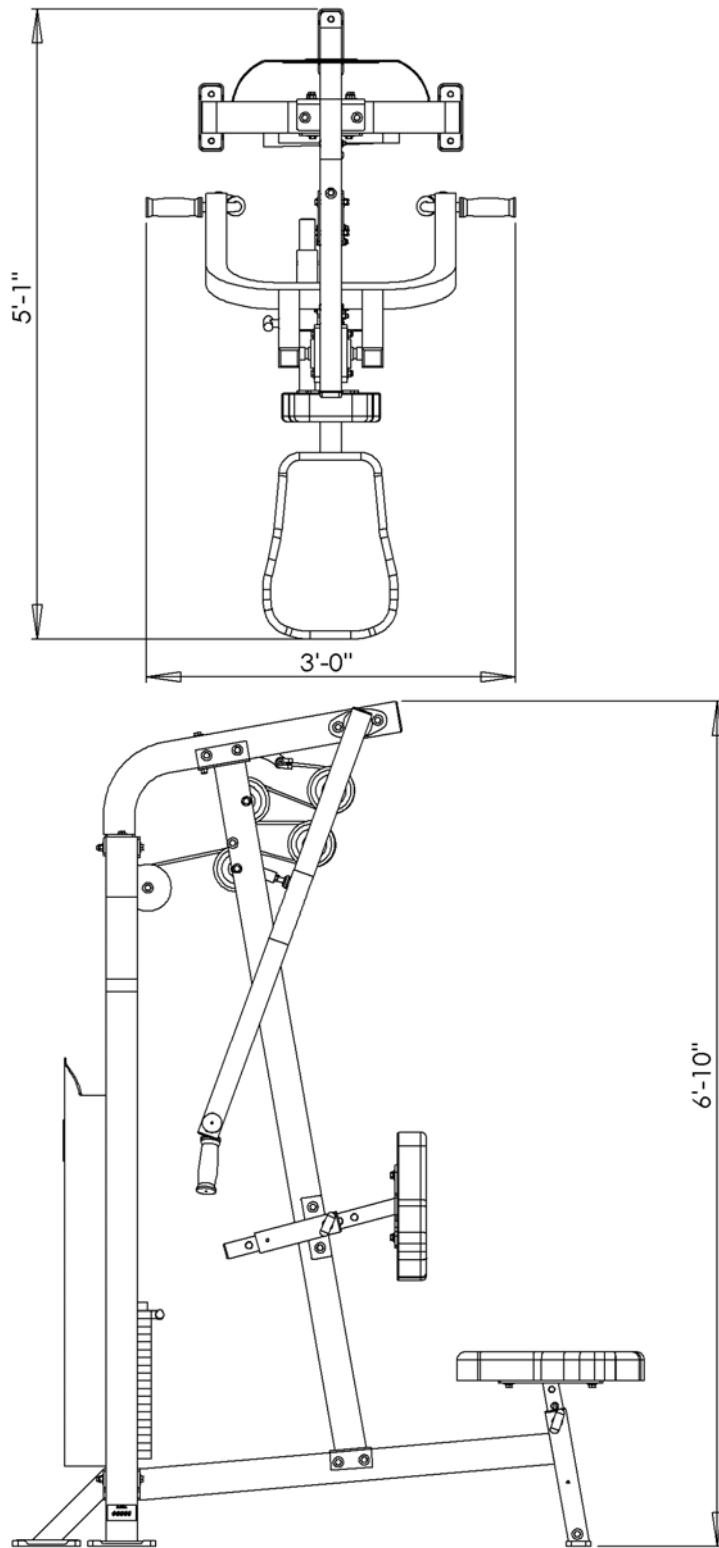

Layout Diagram

The S-3 has a layout dimension of 3'-0" (width) x 5'-1" (length) x 6'-10" (height). There should be a minimum of 18", preferably 24", of working space around the entire unit.